

**YAMAHA**

**PORTATONE**  
**PSR-84**  
**PSR-85**

**Owner's Manual**  
**Bedienungsanleitung**  
**Mode d'emploi**  
**Manual de instrucciones**

# **YAMAHA** PORTATONE **PSR-84/PSR-85**

**Owner's Manual**

Page 2 — 43

***English***

**Bedienungsanleitung**

Seite 44 — 85

***Deutsch***

**Mode d'emploi**

Pages 86 — 127

***Français***

**Manual de instrucciones**

Páginas 128 — 169

***Español***

## ***Congratulations!***

You are the proud owner of a Yamaha PSR-84/PSR-85. Your PSR-84/PSR-85 is a high-quality musical instrument that incorporates advanced Yamaha digital technology and many versatile features. In order to obtain maximum performance and enjoyment from your PSR-84/PSR-85, we urge you to read this Owner's Manual thoroughly while trying out the various features described. Keep the Owner's Manual in a safe place for later reference.

## **CONTENTS**

|  |    |  |    |
|--|----|--|----|
| <b>HOW TO USE THE MANUAL</b> .....               | 3  | <b>AUTO ACCOMPANIMENT</b> .....          | 18 |
| <b>NOMENCLATURE</b> .....                        | 4  | STYLE SELECT .....                       | 18 |
| <b>PREPARATION</b> .....                         | 6  | ACCOMPANIMENT CONTROL .....              | 18 |
| Power Supply .....                               | 6  | THE SINGLE FINGER MODE .....             | 20 |
| Using Headphones Or                              |    | THE FINGERED MODE .....                  | 20 |
| An External Sound System .....                   | 7  | ORCHESTRATION .....                      | 21 |
| The Foot Pedal .....                             | 7  | CUSTOM STYLE .....                       | 21 |
| The Music Stand .....                            | 7  | <b>VOICE</b> .....                       | 23 |
| <b>QUICK OPERATION GUIDE</b> .....               | 8  | VOICE SELECT .....                       | 23 |
| Select & Play Voices .....                       | 8  | THE SPLIT MODE .....                     | 25 |
| Add Reverb (PSR-85 only) .....                   | 8  | REVERB DEPTH (PSR-85 only) .....         | 25 |
| The Split Mode —                                 |    | VOLUME .....                             | 25 |
| Play Different Left- And Right-Hand Voices ..... | 9  | OCTAVE .....                             | 26 |
| The Dual Voice Mode —                            |    | PAN .....                                | 26 |
| Play Two Voices Across The Entire Keyboard ..... | 9  | MIDI CHANNEL .....                       | 26 |
| Play With Auto Accompaniment .....               | 10 | DUAL VOICE .....                         | 26 |
| Play With Auto Harmony .....                     | 11 | AUTO HARMONY .....                       | 27 |
| <b>FEATURE REFERENCE</b> .....                   | 12 | VOICE MEMORY .....                       | 27 |
| <b>OVERALL CONTROL</b> .....                     | 12 | <b>SONG MEMORY</b> .....                 | 28 |
| POWER Button .....                               | 12 | RECORDING A MELODY .....                 | 28 |
| MODE .....                                       | 12 | RECORDING A CHORD SEQUENCE .....         | 30 |
| DSP (Digital Sound Processing —                  |    | MELODY AND CHORD PLAYBACK .....          | 31 |
| PSR-85 only) .....                               | 13 | THE CONDUCTOR .....                      | 32 |
| MASTER VOLUME .....                              | 13 | <b>THE MULTI PADS (PSR-85)</b> .....     | 33 |
| ACCOMPANIMENT VOLUME .....                       | 13 | <b>THE DRUM PADS (PSR-84)</b> .....      | 34 |
| PITCH BEND .....                                 | 13 | <b>MIDI</b> .....                        | 35 |
| TRANPOSE .....                                   | 14 | RECEIVE CHANNEL/CLOCK .....              | 35 |
| TUNING .....                                     | 14 | MODE .....                               | 35 |
| TEMPO .....                                      | 14 | System Exclusive Reception .....         | 36 |
| SPLIT POINT CHANGE .....                         | 15 | Transmitted Data .....                   | 37 |
| PAGE MEMORY .....                                | 15 | <b>DEMO</b> .....                        | 38 |
|  |    | <b>APPENDIX A: MIDI BASICS</b> .....     | 39 |
|  |    | <b>APPENDIX B: POLYPHONY</b> .....       | 40 |
|  |    | <b>APPENDIX C: TROUBLESHOOTING</b> ..... | 41 |
|  |    | <b>APPENDIX D: MAINTENANCE</b> .....     | 41 |
|  |    | <b>APPENDIX E: SYSTEM RESET</b> .....    | 42 |
|  |    | <b>SPECIFICATIONS</b> .....              | 42 |
|  |    | <b>INDEX</b> .....                       | 43 |

# HOW TO USE THE MANUAL

---

This owner's manual is divided into three main sections:

## ● **PREPARATION** [page 6]

This section outlines the first things you must do before playing the PSR-84/PSR-85. Including power supply setup and external connections.

## ● **QUICK OPERATION GUIDE** [page 8]

The QUICK OPERATION GUIDE provides simplified operation procedures for several of the PSR-84/PSR-85's main features. Each step includes a page number in the "FEATURE REFERENCE" section on which you can find full details about the corresponding control or feature.

## ● **FEATURE REFERENCE** [page 12]

This section provides full details on all PSR-84/PSR-85 features and controls. The features are organized in the same way as they are on the PSR-84/PSR-85 panel — in functional groups such as "OVERALL CONTROL," "AUTO ACCOMPANIMENT," "VOICE," etc.


Start with the "PREPARATION" section to ensure that you set up your PSR-84/PSR-85 properly. Then try out the basic features outlined in the "QUICK OPERATION GUIDE," referring to the page numbers given if you need more information. Refer to the "FEATURE REFERENCE" section whenever you need detailed information about a control or feature. The manual has an INDEX at the back which you can use to quickly locate information about specific features. The "NOMENCLATURE" section which follows also provides page numbers on which details about each control can be found.

## **The Appendices**

In addition to the three main sections described above, the manual has five appendices containing general information about MIDI, PSR-84/PSR-85 polyphony, troubleshooting, maintenance, and system reset.

# NOMENCLATURE

## PSR-84

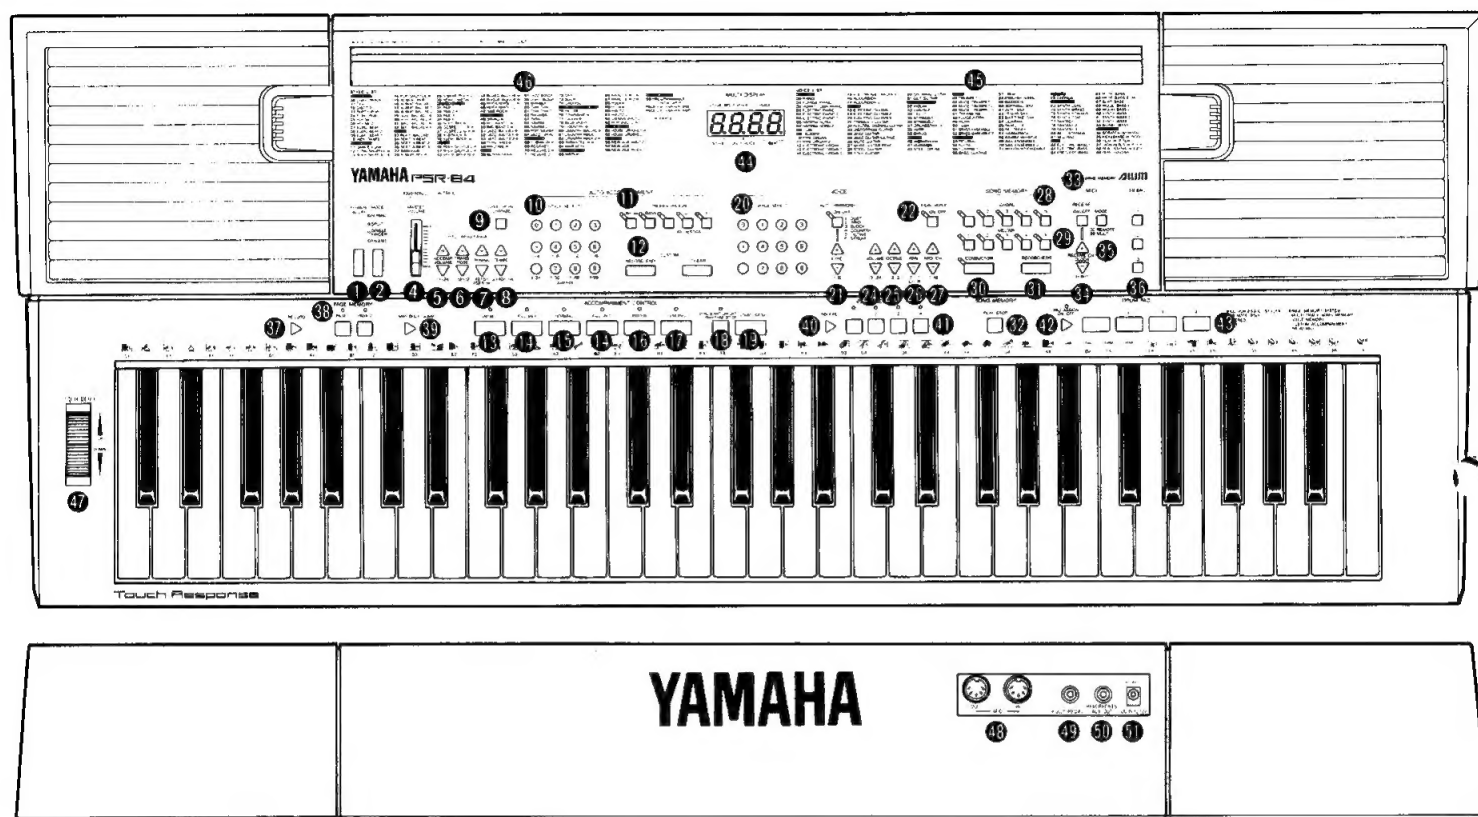

## Top Panel Controls

### ■ OVERALL CONTROL

- ① [POWER] Button ..... page 12
- ② [MODE] Button ..... page 12
- ③ [DSP] Button (PSR-85) ..... page 13
- ④ [MASTER VOLUME] Control ..... page 13
- ⑤ [ACCOMP. VOLUME/PITCH BEND RANGE] Buttons ..... page 13, 14
- ⑥ [TRANPOSE] Buttons ..... page 14
- ⑦ [TUNING] Buttons ..... page 14
- ⑧ [TEMPO] Buttons ..... page 14
- ⑨ [SPLIT POINT CHANGE] Button ..... page 15

### ■ PAGE MEMORY

- ③⑦ [RECORD] Button ..... page 15
- ③⑧ [PAGE 1] and [PAGE 2] Buttons (PSR-84), [PAGE 1] through [PAGE 4] Buttons (PSR-85) ..... page 15
- ③⑨ [MIDI BULK DUMP] Button ..... page 17

### ■ AUTO ACCOMPANIMENT

- ⑩ Numeric STYLE SELECT Buttons ..... page 18
- ⑪ ORCHESTRATION Buttons: [RHYTHM], [BASS], [ORCHESTRA 1], [ORCHESTRA 2], and [ORCHESTRA 3] ..... page 21

- ⑫ CUSTOM [RECORD/END] and [CLEAR] Buttons ..... page 21


### ■ ACCOMPANIMENT CONTROL

- ⑬ [INTRO] Button ..... page 19
- ⑭ [FILL IN 1] and [FILL IN 2] Button ..... page 19
- ⑮ [NORMAL] Button ..... page 19
- ⑯ [BRIDGE] Button ..... page 19
- ⑰ [ENDING] Buttons ..... page 19
- ⑱ [SYNC-START ON/OFF — RHYTHM STOP] Button ..... page 18
- ⑲ [START/STOP] Button ..... page 18

### ■ VOICE

- ⑳ Numeric VOICE SELECT Buttons ..... page 23
- ㉑ AUTO HARMONY [ON/OFF] and [TYPE] Buttons ..... page 27
- ㉒ [DUAL VOICE] Button ..... page 26
- ㉓ [REVERB DEPTH] Buttons (PSR-85) ..... page 25
- ㉔ [VOLUME] Buttons ..... page 25
- ㉕ [OCTAVE] Buttons ..... page 26
- ㉖ [PAN] Buttons ..... page 26
- ㉗ [MIDI CH.] Buttons ..... page 26

# PSR-85

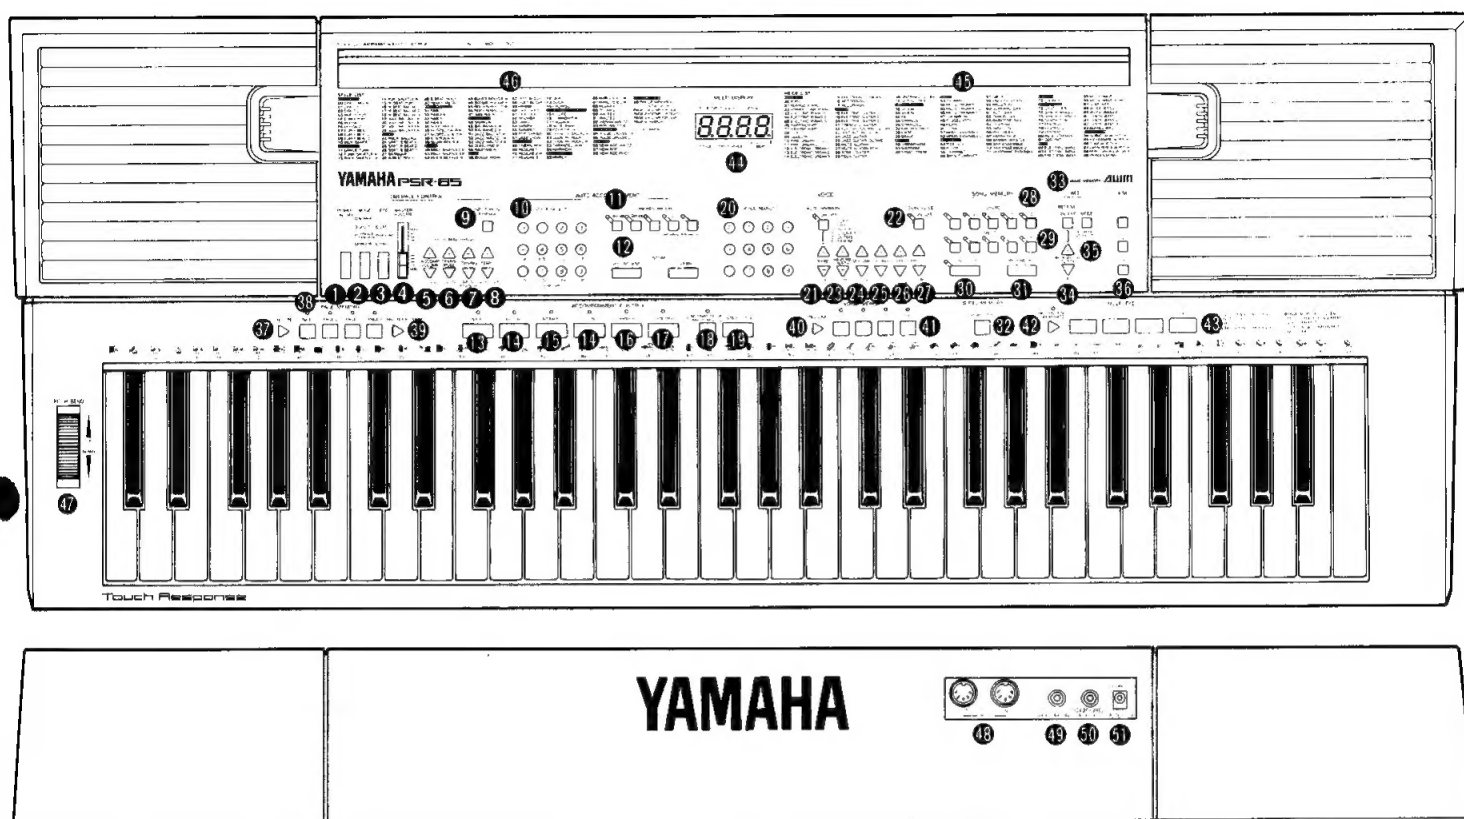

## ■ VOICE MEMORY

- 40 [RECORD] Button ..... page 27
- 41 [1] through [4] Buttons ..... page 27

## ■ SONG MEMORY

- 28 [CHORD 1] through [CHORD 5] Buttons ..... page 30
- 29 [MELODY 1] through [MELODY 5] Buttons ..... page 28
- 30 [CONDUCTOR] Button ..... page 32
- 31 [RECORD/EDIT] Button ..... page 28
- 32 [PLAY/STOP] Button ..... page 29

## ■ MIDI

- 43 [RECEIVE ON/OFF] Button ..... page 35
- 44 [RECEIVE CH./CLOCK] Buttons ..... page 35
- 45 [MODE] Button ..... page 35

## ■ DEMO

- 46 DEMO Buttons [1] through [3] ..... page 38

## ■ DRUM PAD (PSR-84)

- 42 [PAD ASSIGN ON/OFF] Button ..... page 34
- 43 [1] through [4] Buttons ..... page 34

## ■ MULTI PAD (PSR-85)

- 42 [RECORD/END (TERMINATE)] Button ..... page 33
- 43 [1] through [4] Buttons ..... page 33

## ■ OTHERS

- 44 MULTI DISPLAY ..... page 6
- 45 VOICE LIST ..... page 23
- 46 STYLE LIST ..... page 18
- 47 PITCH BEND WHEEL ..... page 13

## Rear Panel Connectors

- 48 MIDI IN and OUT Connectors ..... page 39
- 49 FOOT PEDAL Jack ..... page 7
- 50 HEADPHONES/AUX. OUT Jack ..... page 7
- 51 DC IN Jack ..... page 6

# PREPARATION

This section contains information about setting up your PSR-84/PSR-85 and preparing to play. Be sure to go through this section carefully before using your PSR-84/PSR-85.

## POWER SUPPLY

Your PSR-84 or PSR-85 will run either from batteries\* or an optional power adaptor. Follow the instructions below according to the power source you intend to use.

\* When batteries are used the sound of the PSR-84/PSR-85 may be distorted at high volume levels. This is because the power of the amplifier is reduced when batteries are used.

### CAUTION!

Never interrupt the power supply (e.g. remove the batteries or unplug the AC adaptor) during any PSR-84/PSR-85 record operation! Doing so can result in a loss of data.

### Using Batteries (sold separately)

Six 1.5V SUM-1, "D" size, R-20 or equivalent batteries must first be installed in the battery compartment, as follows:

1. Open the battery compartment cover located on the instrument's bottom panel and remove the old batteries.
2. Insert the six new batteries, being careful to follow the polarity markings on the inside of the compartment.
3. Replace the compartment cover, making sure that it locks firmly in place.

When the batteries need to be replaced, "batt" will appear on the MULTI DISPLAY. When this display appears the PSR-84/PSR-85 will not operate, and the power must be turned off while either the batteries are replaced or an AC adaptor is connected.\* Internal data will be retained for up to about 10 minutes while the batteries are changed or an AC adaptor is connected.

\* If fresh batteries or an AC adaptor are not immediately available, it may be possible to use the PSR-84/PSR-85 for a little while longer by turning the power off and then on again, and playing at a low volume setting.

### Caution:


1. When the batteries run down, replace them with a complete set of six new batteries. NEVER mix old and new batteries.
2. Do not use different kinds of batteries at the same time.
3. To prevent possible damage due to battery leakage, remove the batteries from the instrument if it is not to be used for an extended period of time.

### Using An Optional AC Power Adaptor

Plug the DC output cable from an optional Yamaha PA-5 AC Power Adaptor into the DC IN jack on the rear panel of the PSR-84/PSR-85, then plug the AC cable of the Power Adaptor into a convenient wall AC power socket.


The internal batteries are automatically disconnected when an AC Power Adaptor is used.

• Use **ONLY** a Yamaha PA-5 AC Power Adaptor to power your instrument from the AC mains. Other adaptors may be damaged by use with the PSR-84/PSR-85, and they may even cause serious damage to your PSR-84/PSR-85.

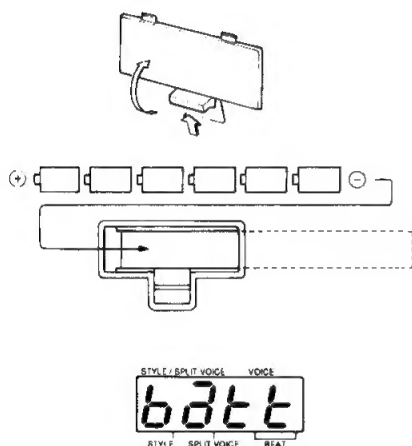



## USING HEADPHONES OR AN EXTERNAL SOUND SYSTEM

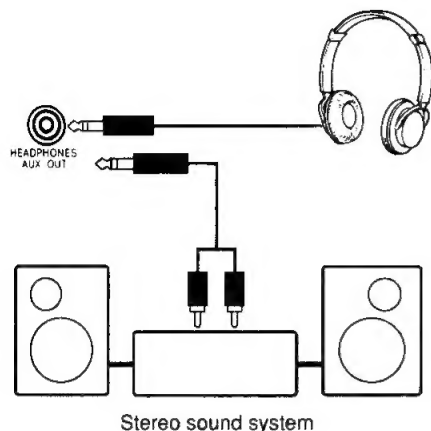

A standard pair of stereo headphones can be plugged into the rear-panel HEADPHONES/AUX. OUT jack for private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into the HEADPHONES jack. The HEADPHONES/AUX. OUT jack can also be used to deliver the output of the PSR-84/PSR-85 to a keyboard amplifier, stereo sound system, mixing console or tape recorder.


## THE FOOT PEDAL



Plug the supplied foot pedal into the rear-panel FOOT PEDAL jack. The foot pedal functions as a damper pedal, controlling sustain. Press the pedal to sustain notes after the keys are released.

- Be sure that you do not press the pedal while inserting the plug into the FOOT PEDAL jack or while turning the power on. If you do, the ON/OFF status of the footswitch will be reversed. This function has been implemented to allow either press-to-make or press-to-break contact type footswitches to be used with the PSR-84/PSR-85.
- Sustain cannot be applied to voices in which releasing the key played does not stop the sound: e.g. MUTE GUITAR (26), MARIMBA (41), PERCUSSIONS (99), etc.

## THE MUSIC STAND

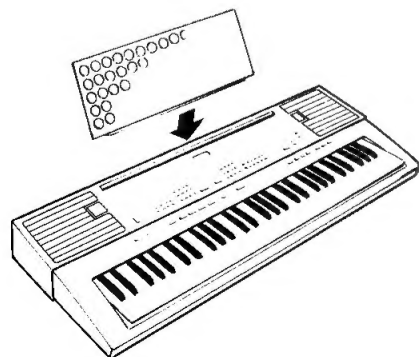


Insert the bottom edge of the music stand into the slot located at the rear of the PSR-84/PSR-85 control panel.




# QUICK OPERATION GUIDE

This section provides brief outlines of the procedures for operating several of the most basic PSR-84/PSR-85 features. Refer to the page numbers listed for details about each feature and more advanced capabilities.

## SELECT & PLAY VOICES

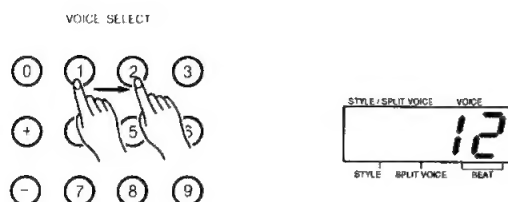

 1. Use the VOICE SELECT buttons to select a voice [page 23].




2. Use the MASTER VOLUME control to set the overall volume [page 13].

3. Play.

## ADD REVERB (PSR-85 only)




1. Use the [DSP] button to select the HALL or ROOM reverb type [page 13].

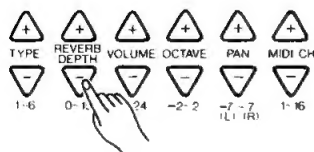

2. Use the [REVERB DEPTH] button to set the depth of the selected reverb effect for the current voice [page 25].

## THE SPLIT MODE

### PLAY DIFFERENT LEFT- AND RIGHT-HAND VOICES

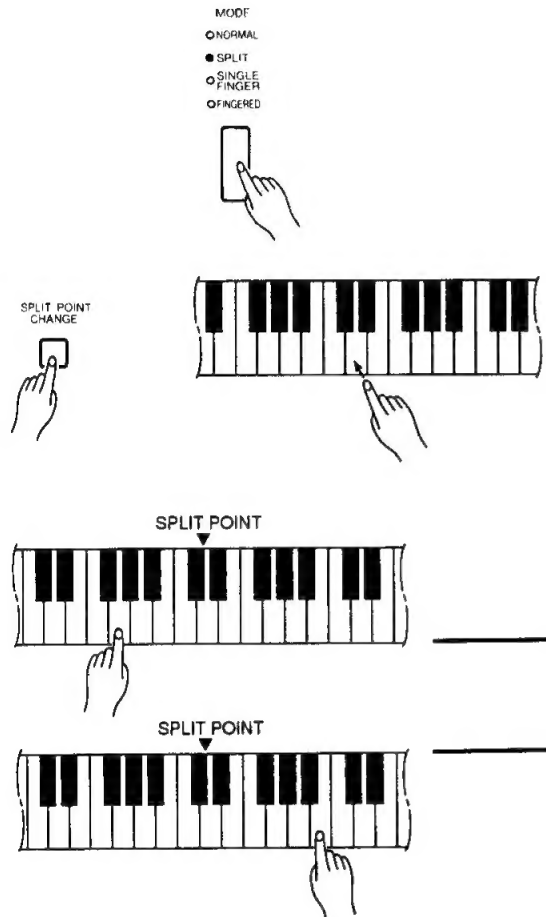

1. Use the [MODE] button to select the SPLIT mode *[page 12]*.


2. Use the [SPLIT POINT CHANGE] button to change the split point, if necessary *[page 15]*.

3. Use the VOICE SELECT buttons to select the left-hand and right-hand voices *[page 25]*.

Press a left-hand key before selecting the left-hand voice and a right-hand key before selecting the right-hand voice.

## THE DUAL VOICE MODE

### PLAY TWO VOICES ACROSS THE ENTIRE KEYBOARD

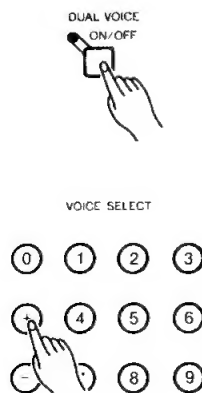


1. Use the VOICE SELECT buttons to select a voice *[page 23]*.

2. Press the [DUAL VOICE] button to engage the DUAL VOICE mode *[page 26]*.

3. Use the VOICE SELECT buttons to select the second “dual” voice *[page 26]*.

4. Play.

## PLAY WITH AUTO ACCOMPANIMENT

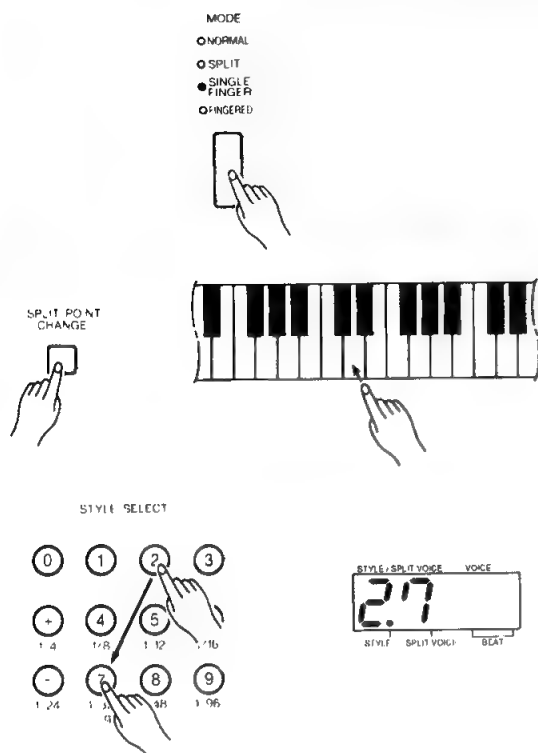


1. Use the [MODE] button to select the SINGLE FINGER or FINGERED mode [page 12].


2. If necessary, use the [SPLIT POINT CHANGE] button to set the split point [page 15].

3. Use the STYLE SELECT buttons to select the desired accompaniment style [page 18]. You can also select a melody (upper keyboard) voice via the VOICE SELECT buttons [page 23].


4. Use the ACCOMPANIMENT CONTROL buttons to determine how the accompaniment will be started [page 18], then press the [SYNC-START ON/OFF] button to engage the synchronized start mode [page 18].

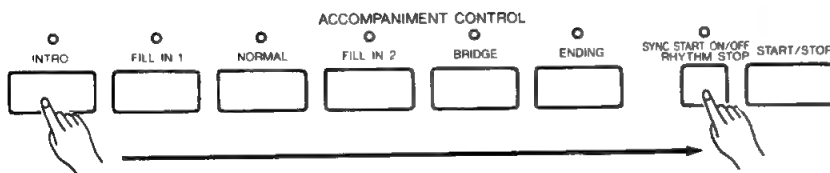

5. Press any key or play a chord to the left of the split point to start the automatic accompaniment — play using either SINGLE FINGER or FINGERED type fingering according to the selected mode [page 12].

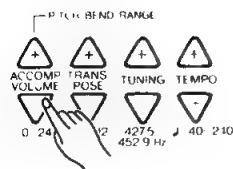

6. Use the [ACCOMP. VOLUME] buttons to adjust the volume of the accompaniment sound [page 13].

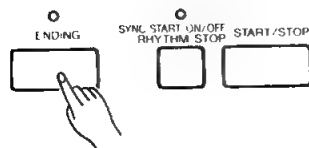


7. Use the ACCOMPANIMENT CONTROL section [START/STOP] or [ENDING] button to stop the accompaniment [page 19].

## PLAY WITH AUTO HARMONY


MODE  
 ○ NORMAL  
 ○ SPLIT  
 ● SINGLE FINGER  
 ○ FINGERED



1. Use the [MODE] buttons to select the SPLIT, SINGLE FINGER, or FINGERED mode [page 12].

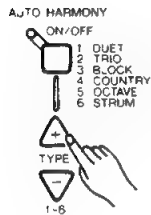

2. Use the AUTO HARMONY TYPE buttons to select a harmony type between "1" and "6" [page 27].

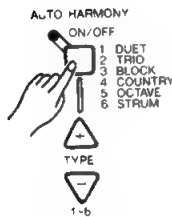

3. Press the [AUTO HARMONY ON/OFF] button so that its indicator lights [page 27].

4. Play chords on the left-hand section of the keyboard while playing a melody on the right-hand section of the keyboard [page 27].


# FEATURE REFERENCE

The "FEATURE REFERENCE" provides full details on each of the PSR-84/PSR-85 features. The features are presented as they appear on the PSR-84/PSR-85 panel, organized into functional groups such as "OVERALL CONTROL," "AUTO ACCOMPANIMENT," and "VOICE." To find information about a particular control or feature, either go directly to the section in which that control or feature is found, or look up the name of the control or feature in the index at the end of the manual.

## OVERALL CONTROL


### PSR-84

#### OVERALL CONTROL

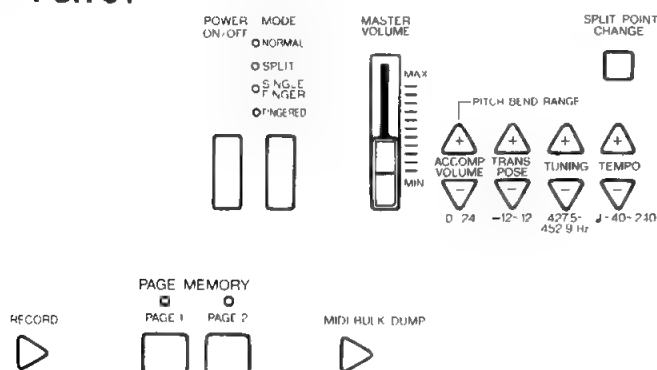

### PSR-85

#### OVERALL CONTROL

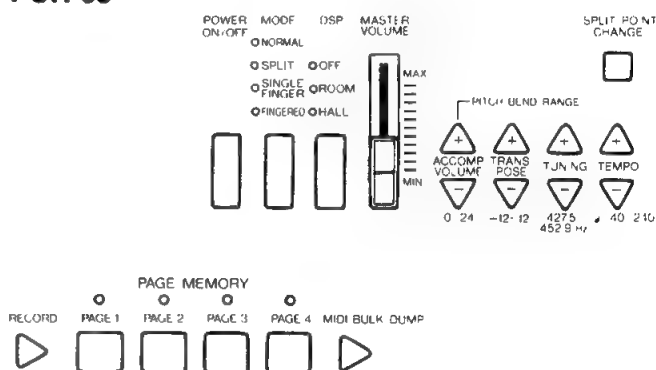

## ● POWER Button

Press the [POWER] button to turn the power on or off.

POWER ON/OFF



### Auto Power OFF

To prevent unnecessary battery drainage, the PSR-84/PSR-85 features an Auto Power OFF function that automatically turns the power OFF if the instrument is not used — i.e. no buttons or keys are pressed or no automatic features are operating — for approximately 10 minutes.

The Auto Power OFF function does not operate when the PSR-84/PSR-85 is powered from an optional AC Power Adaptor.

## ● MODE

The [MODE] button determines the operational mode of the PSR-84/PSR-85. Press the [MODE] button as many times as necessary until the indicator corresponding to the desired mode lights:

MODE  
● NORMAL  
○ SPLIT  
○ SINGLE FINGER  
○ FINGERED



### • NORMAL

This is the normal mode of operation in which you can select and play a single voice (or two voices if the DUAL VOICE function is used), and select styles for rhythm-only accompaniment.

### • SPLIT

In this mode different voices can be selected for the left- and right-hand sections of the keyboard. See page 25 for details.

## • SINGLE FINGER

This mode provides automatic rhythm, bass, and orchestra accompaniment that you can control by playing just one, two, or three keys in the left-hand section of the keyboard. See page 20 for details.

## • FINGERED

The FINGERED mode provides automatic rhythm, bass, and orchestra accompaniment based on chords you play in the left-hand section of the keyboard. See page 20 for details.

## ● DSP (Digital Sound Processing — PSR-85 only)

The [DSP] button provides two digital effects that you can use for extra depth and expressive power. This button determines the type of effect to be used, while the REVERB DEPTH controls in the VOICE section allow the depth of the effect to be individually set for each voice — including the left- and right-hand split voices, and the main and sub dual voices.

Each time the [DSP] button is pressed the next effect is selected and the corresponding indicator will light. No effect is selected when the OFF indicator is lit.



### OFF

No effect is produced.

### ROOM

This setting adds a reverb effect to the sound that is similar to the type of acoustic reverberation you would hear in a room.

### HALL

For a spacious reverb sound, use the HALL setting. This effect simulates the natural reverberation of a concert hall.

• Almost all of the auto accompaniment styles are programmed to use the DSP effects, but no effect will be produced if DSP is set to OFF.

 
## ● MASTER VOLUME

Use the MASTER VOLUME control to adjust the overall volume of the PSR-84/PSR-85 — including the sound of the voices being played, auto accompaniment, song memory playback, etc.



## ● ACCOMPANIMENT VOLUME

Although the MASTER VOLUME control can be used to set the overall volume level, the ACCOMPANIMENT VOLUME [▲] and [▼] buttons can be used to adjust the volume of the selected accompaniment in relation to the right-hand melody voice. Press the [▲] button to increase the volume, or the [▼] button to decrease the volume. The selected volume level will be displayed on the MULTI DISPLAY while the volume is being adjusted, and for approximately 2 seconds after either VOLUME button is released.



The volume range is from 0 to 24. A setting of 0 produces no sound while 24 is the highest volume level. The default accompaniment volume value (21) can be recalled at any time by pressing both the ACCOMPANIMENT VOLUME [▲] and [▼] buttons at the same time.

• When this parameter has been changed, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly selected data will be lost when a different PAGE MEMORY is selected.


## ● PITCH BEND

The PITCH BEND wheel to the left of the keyboard allows the pitch notes to be bent up or down — roll the wheel away from you to bend up, and toward you to bend down (this situation can be reversed, as described below). When the PITCH BEND wheel is moved almost all the way in either direction, the current pitch bend range value will appear on the MULTI DISPLAY (see below).


## Setting the Pitch Bend Range

The maximum amount of pitch bend produced by the PITCH BEND wheel can be set anywhere from  $\pm 1$  semitone to  $\pm 12$  semitones (i.e. plus or minus one octave).

1. To set the pitch bend range, roll the PITCH BEND wheel all the way in either direction so that the current range value appears on the MULTI DISPLAY.

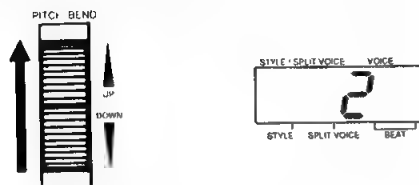

2. Use the ACCOMP. VOLUME (PITCH BEND RANGE) [▲] and [▼] buttons to set the desired range — the pitch bend range value is displayed in semitones (-12 through 12). If a minus setting is selected pitch bend wheel operation is reversed — i.e. roll the wheel away from you to lower pitch.

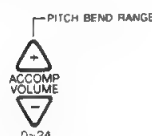


3. Release the PITCH BEND wheel.

- When this parameter has been changed, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly selected data will be lost when a different PAGE MEMORY is selected.

## TRANPOSE

 The PSR-84/PSR-85 [TRANPOSE] buttons makes it possible to shift the pitch of the PSR-84/PSR-85 up or down in semitone intervals up to a maximum of 12 semitones (one octave). Transposing the pitch of the PSR-84/PSR-85 keyboard makes it easier to play in difficult key signatures, and you can simply match the pitch of the keyboard to the range of a singer or other instrumentalist.



The TRANPOSE [▲] and [▼] buttons are used for transposition. Press the [▲] button to increase the pitch of the keyboard, or the [▼] button to lower the pitch. The selected degree of transposition will be displayed on the center two digits of the MULTI DISPLAY while the TRANPOSE [▲] or [▼] button is pressed, and for approximately 2 seconds after either TRANPOSE button is released.

The transposition range is from -12 to +12, with -12 corresponding to downward transposition by 12 semitones (one octave), and +12 corresponding to upward transposition by 12 semitones. 0 is the “normal” keyboard pitch value. The normal transpose value (0) can be recalled at any time by pressing both the TRANPOSE [▲] and [▼] buttons at the same time.

- The TRANPOSE function will not work while any keys are held.
- TRANPOSE does not affect the percussion voices (numbers 94 through 99).
- When this parameter has been changed, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly selected data will be lost when a different PAGE MEMORY is selected.

## TUNING

The PSR-84/PSR-85 [TUNING] buttons makes it possible to tune the pitch of the PSR-84/PSR-85 to match other instruments. Tuning can be accomplished over a  $\pm 50$ -cent range (that's 100 cents total, or one semitone) in 16 steps.



 
The TUNING [▲] and [▼] buttons are used for tuning. Press the [▲] button to raise the pitch of the instrument, or the [▼] button to lower the pitch. The selected degree of tuning will be shown on the MULTI DISPLAY in Hertz while the TUNING [▲] or [▼] button is pressed, and for approximately 2 seconds after either TUNING button is released.

The tuning range is from 427.5 Hertz (-50 cents) to 452.9 Hz (+50 cents). 440.0 Hertz ( $\pm 0$  cents) is the “normal” tuning value. The normal tuning value (440.0) can be recalled at any time by pressing both the TUNING [▲] and [▼] buttons at the same time.

- TUNING does not affect the percussion voices (numbers 94 through 99).
- When this parameter has been changed, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly selected data will be lost when a different PAGE MEMORY is selected.

## TEMPO

The TEMPO buttons control the tempo of the AUTO ACCOMPANIMENT, the SONG MEMORY, DEMO playback, and the MULTI PADS on the PSR-85.





Press the TEMPO [▲] button to increase the tempo, or the TEMPO [▼] button to decrease the tempo. The selected tempo will be displayed on the MULTI DISPLAY (in quarter-note beats per minute) while the TEMPO [▲] or [▼] button is pressed, and for approximately 2 seconds after either TEMPO button is released.


The available tempo range is from 40 to 240 beats per minute. Each accompaniment style has a different "default" tempo which is automatically set whenever a new style is selected (but not when a new style is selected while the accompaniment is playing). The default tempo for the currently selected accompaniment style can be recalled at any time by pressing both the TEMPO [▲] and [▼] buttons at the same time.

## SPLIT POINT CHANGE

Separate split points can be set for the SPLIT, FIN-GERED, and SINGLE FINGER modes. The default split point settings are as follows:

- SPLIT mode: C#3
- SINGLE FINGER mode: D2
- FINGERED mode: G2

The split point for each mode can be set to any other key while that mode is selected by pressing the desired split-point key while holding the [SPLIT POINT CHANGE] button.

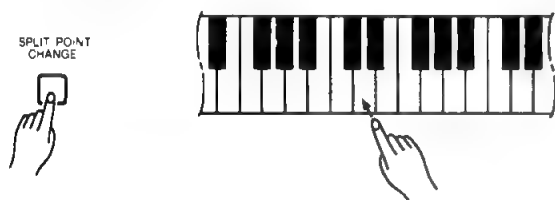

The split point is shown on the MULTI DISPLAY for as long as the [SPLIT POINT CHANGE] button is held. The C3 key, for example, would be displayed as "c 3". F#2 would be displayed as "F#2". The sharp is indicated by the lit bar between the "F" and the "2."



The SPLIT, SINGLE FINGER, and FINGERED mode split points are retained in memory and will be recalled whenever the corresponding mode is selected.

Note that the split-point key is included in the right-hand section of the keyboard.

- When this parameter has been changed, be sure to store the new data to a PAGE MEMORY (see next paragraph). If this is not done the newly selected data will be lost when a different PAGE MEMORY is selected.

## PAGE MEMORY

The PAGE MEMORY can be used to store 4 complete sets of panel settings (including the contents of the SONG MEMORY and MULTI PAD features) in the PSR-85 and 2 in the PSR-84 that can then be recalled simply by pressing a single button.


When the power is initially turned on the previously selected "PAGE" is automatically selected and its indicator will light. If any changes are then made to the panel settings the PAGE indicator will flash, indicating that changes have been made. If the same PAGE button is then pressed the original PAGE settings will be recalled and the indicator will light continuously again.

The following panel settings are stored by the PAGE MEMORY:

- Currently selected voice(s).
- MULTI PAD (PSR-85)/DRUM PAD (PSR-84) contents.
- SONG MEMORY contents.
- VOICE MEMORY contents.
- VOICE section parameter settings (Auto Harmony, Reverb Depth (PSR-85), Volume, Octave, Pan, MIDI Out Channel, Dual).
- CUSTOM ACCOMPANIMENT contents.
- Currently selected STYLE.
- Currently selected chord voice when accompaniment stopped.
- ORCHESTRATION settings.
- ACCOMPANIMENT CONTROL status.
- MODE.
- ACCOMP. VOLUME.
- TUNE.
- TRANSPOSE.
- TEMPO.
- PITCH BEND RANGE.
- DSP (PSR-85)
- MIDI RECEIVE CHANNEL/CLOCK.
- \* The MIDI MODE setting is not recorded by the PAGE MEMORY. MIDI MODE is reset to "00" whenever the power is turned on or a different PAGE is selected.

## Recording

Make the desired panel settings, then press one of the PAGE MEMORY buttons while holding the [RECORD] button. The corresponding indicator will light indicating that the data has been memorized. All previous data in the selected PAGE will be erased.

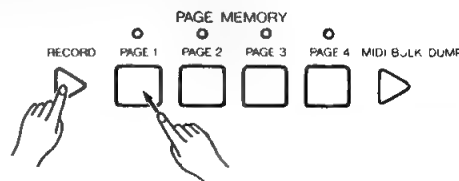

- The PAGE MEMORY cannot be recorded while any automatic playback feature or any recording function is running (AUTO ACCOMPANIMENT play; SONG MEMORY record/play/play ready; PSR-85 MULTI PAD record/play; CUSTOM ACCOMPANIMENT record/play, DEMO play, PSR-84 DRUM PAD pad assign).

# FEATURE REFERENCE (OVERALL CONTROL)

## Recall

To recall a PAGE MEMORY setting simply press the appropriate PAGE MEMORY button. The corresponding indicator will light and the required panel settings will be recalled.

- If the panel settings are changed but not recorded (including such operations as completing a SONG MEMORY recording), those changes will be lost if a PAGE MEMORY is recalled.
- A different PAGE MEMORY cannot be selected while any automatic playback feature or any recording function is running (AUTO ACCOMPANIMENT play; SONG MEMORY record/play/play ready; PSR-85 MULTI PAD record/play; CUSTOM ACCOMPANIMENT record/play, DEMO play, PSR-84 DRUM PAD pad assign).
- If the panel settings have been changed but not recorded and the power is turned off, those panel settings will be memorized separately from the page memory.
- PAGE MEMORY data will be retained in memory even when the PSR-84/PSR-85 power is turned off as long as a full set of good batteries is present or an AC power adaptor remains connected.
- If no batteries are installed and no AC power adaptor is connected for more than about 10 minutes, the PAGE memory is automatically initialized when the power is turned on. Individual PAGE MEMORY banks can be initialized by holding the corresponding PAGE MEMORY button while turning the power on. All PAGE MEMORY banks can be initialized at once by holding both the CUSTOM [RECORD/END] and [CLEAR] buttons while turning the power on. In either case, "clr" appears on the MULTI DISPLAY when the memory is initialized.



The initialized settings are as follows:

## List of Initial PAGE memory settings

\* Settings in parentheses apply to the PSR-85 only.

 
|                    |   |   |   | PAGE 1 ~ 2 [PSR-84]<br>PAGE 1 ~ 4 [PSR-85] |   |      |
|--------------------|---|---|---|--|---|------|
| OVERALL CONTROL    | MODE (DSP)<br>PITCH BEND RANGE<br>ACCOMP. VOL<br>TRANPOSE<br>TUNING |   |   | NORMAL (ROOM)<br>2<br>21<br>0<br>440       |   |      |
|                    | SPLIT POINT   |   | SPLIT SINGLE FINGER FINGERED                        | C#3<br>D2<br>G2                            |   |      |
| AUTO ACCOMPANIMENT | STYLE No.   |   |   | 00   |   |      |
|                    | ORCHESTRATION   | RHYTHM<br>BASS<br>ORCHESTRA 1<br>ORCHESTRA 2<br>ORCHESTRA 3 |   | ON<br>ON<br>ON<br>ON<br>ON                 |   |      |
|                    |   | CUSTOM STYLE  |   |  | PAGE 1: Style for DEMO 1<br>PAGE 2: Style for DEMO 2<br>(PAGE 3: Style for DEMO 3)<br>(PAGE 4: LAMBADA) |      |
|                    |   | ACCOMP. CONTROL<br>SYNCHRO START                            |   |  | NORMAL<br>OFF   |      |
|                    |   | Chord Voice When Accompaniment Stopped                      | VOICE No. (REVERB DEPTH)<br>VOLUME<br>OCTAVE<br>PAN |  | 35<br>(6)<br>12<br>2<br>0   |      |
| VOICE              |   |   |   | NORMAL/DUAL                                | NORMAL  | DUAL |
|                    | Current   | LEFT  | VOICE No. (REVERB DEPTH)<br>VOLUME<br>OCTAVE<br>PAN | 89<br>(6)<br>21<br>1<br>0                  | 35<br>(6)<br>16<br>-1<br>0  |      |
|                    |   |   | MIDI CH<br>DUAL VOICE                               | 2<br>OFF                                   |   |      |
|                    |   | RIGHT   | VOICE No. (REVERB DEPTH)<br>VOLUME<br>OCTAVE<br>PAN | 00<br>(6)<br>21<br>0<br>0                  | 35<br>(6)<br>16<br>0<br>0   |      |
|                    |   |   | HARMONY TYPE<br>MIDI CH<br>DUAL VOICE               | 3<br>1<br>OFF                              |   |      |
|                    |   |   | HARMONY ON/OFF                                      |  |   | OFF  |
|                    | VOICE MEMORY 1  | LEFT  | VOICE No. (REVERB DEPTH)<br>VOLUME<br>OCTAVE<br>PAN | 86<br>(6)<br>21<br>1<br>0                  | 95<br>(6)<br>21<br>0<br>0   |      |
|                    |   |   | MIDI CH<br>DUAL VOICE                               | 2<br>OFF                                   |   |      |
|                    |   | RIGHT   | VOICE No. (REVERB DEPTH)<br>VOLUME<br>OCTAVE<br>PAN | 03<br>(6)<br>21<br>0<br>0                  | 00<br>(6)<br>10<br>0<br>0   |      |
|                    |   |   | HARMONY TYPE<br>MIDI CH<br>DUAL VOICE               | 2<br>1<br>ON                               |   |      |
|                    |   |   | HARMONY ON/OFF                                      |  |   | OFF  |

| VOICE                    | NORMAL/DUAL       |                |                |         | NORMAL                             | DUAL |
|--------------------------|-------------------|----------------|----------------|---------|------------------------------------|------|
|                          | VOICE<br>MEMORY 2 | LEFT           | VOICE No.      | 35      | 93                                 |      |
|                          |                   |                | (REVERB DEPTH) | (6)     | (14)                               |      |
|                          |                   |                | VOLUME         | 21      | 22                                 |      |
|                          |                   |                | OCTAVE         | 0       | 1                                  |      |
|                          |                   |                | PAN            | 0       | 0                                  |      |
|                          |                   | MIDI CH        | 2              |         |                                    |      |
|                          |                   | DUAL VOICE     | ON             |         |                                    |      |
|                          |                   | RIGHT          | VOICE No.      | 35      | 49                                 |      |
|                          |                   |                | (REVERB DEPTH) | (6)     | (9)                                |      |
|                          |                   |                | VOLUME         | 21      | 20                                 |      |
|                          | OCTAVE            |                | 0              | 0       |                                    |      |
|                          | PAN               |                | -4             | 0       |                                    |      |
|                          | HARMONY TYPE      | 5              |                |         |                                    |      |
|                          | MIDI CH           | 1              |                |         |                                    |      |
|                          | DUAL VOICE        | ON             |                |         |                                    |      |
|                          | HARMONY ON/OFF    |                |                |         | OFF                                |      |
|                          | VOICE<br>MEMORY 3 | LEFT           | VOICE No.      | 56      | 59                                 |      |
|                          |                   |                | (REVERB DEPTH) | (6)     | (9)                                |      |
|                          |                   |                | VOLUME         | 24      | 21                                 |      |
|                          |                   |                | OCTAVE         | 1       | 1                                  |      |
|                          |                   |                | PAN            | 0       | 0                                  |      |
|                          |                   | MIDI CH        | 2              |         |                                    |      |
|                          |                   | DUAL VOICE     | OFF            |         |                                    |      |
|                          |                   | RIGHT          | VOICE No.      | 71      | 53                                 |      |
|                          |                   |                | (REVERB DEPTH) | (6)     | (9)                                |      |
|                          |                   |                | VOLUME         | 21      | 24                                 |      |
|                          | OCTAVE            |                | 0              | 0       |                                    |      |
| PAN                      | 0                 |                | 0              |         |                                    |      |
| HARMONY TYPE             | 1                 |                |                |         |                                    |      |
| MIDI CH                  | 1                 |                |                |         |                                    |      |
| DUAL VOICE               | ON                |                |                |         |                                    |      |
| HARMONY ON/OFF           |                   |                |                | OFF     |                                    |      |
| VOICE<br>MEMORY 4        | LEFT              | VOICE No.      | 30             | 36      |                                    |      |
|                          |                   | (REVERB DEPTH) | (8)            | (13)    |                                    |      |
|                          |                   | VOLUME         | 24             | 18      |                                    |      |
|                          |                   | OCTAVE         | 2              | 1       |                                    |      |
|                          |                   | PAN            | 0              | 0       |                                    |      |
|                          | MIDI CH           | 2              |                |         |                                    |      |
|                          | DUAL VOICE        | ON             |                |         |                                    |      |
|                          | RIGHT             | VOICE No.      | 67             | 60      |                                    |      |
|                          |                   | (REVERB DEPTH) | (9)            | (9)     |                                    |      |
|                          |                   | VOLUME         | 24             | 18      |                                    |      |
| OCTAVE                   |                   | 0              | 0              |         |                                    |      |
| PAN                      |                   | 0              | 0              |         |                                    |      |
| HARMONY TYPE             | 1                 |                |                |         |                                    |      |
| MIDI CH                  | 1                 |                |                |         |                                    |      |
| DUAL VOICE               | ON                |                |                |         |                                    |      |
| HARMONY ON/OFF           |                   |                |                | OFF     |                                    |      |
| VOICE MEMORY 1 ~ 4       |                   |                |                | All OFF |                                    |      |
| SONG<br>MEMORY           | CHORD 1 ~ 5       |                |                |         | No Data                            |      |
|                          | MELODY 1 ~ 5      |                |                |         | No Data                            |      |
|                          | CONDUCTOR         |                |                |         | No Data                            |      |
| MIDI                     | RECEIVE CH 1 ~ 16 |                |                |         | All Enable                         |      |
|                          | CLOCK             |                |                |         | Disable                            |      |
| MULTI<br>PAD<br>[PSR-85] | 1                 |                |                |         | 4 banks x 4 pages<br>= 16 patterns |      |
|                          | 2                 |                |                |         |                                    |      |
|                          | 3                 |                |                |         |                                    |      |
|                          | 4                 |                |                |         |                                    |      |
| DRUM<br>PAD<br>[PSR-84]  | 1                 |                |                |         | 4 banks x 2 pages<br>= 8 voices    |      |
|                          | 2                 |                |                |         |                                    |      |
|                          | 3                 |                |                |         |                                    |      |
|                          | 4                 |                |                |         |                                    |      |

## PAGE MEMORY MIDI BULK DUMP

The contents of each PAGE MEMORY can be bulk dumped via the MIDI OUT connector as a system exclusive message and received by a second PSR-84/PSR-85 or a MIDI data recorder.

1. Press the [MIDI BULK DUMP] button. All PAGE MEMORY indicators will flash and "bdp" will flash on the MULTI DISPLAY.




2. Press the button of the PAGE MEMORY you want to transmit. The corresponding indicator will flash while the data is being transmitted. The bulk dump can be aborted at any time by pressing the [MIDI BULK DUMP] button a second time. No other operations can be performed during a bulk transmission.
3. When the transmission has finished the PAGE MEMORY indicators and MULTI DISPLAY will return to their previous states.

### ● MIDI Bulk Dump Reception

The PSR-84/PSR-85 will automatically receive MIDI bulk dump data transmitted from a second PSR-84/PSR-85 or from a MIDI data recorder if the "00" (remote control) mode is selected. During bulk dump reception none of the panel controls will function and "bdP" will appear on the display. If an error is detected during bulk dump reception "Err" will appear on the display and the bulk dump receive operation will be aborted. If this happens, try sending the data again. When all data has been successfully received the panel controls will be set accordingly. Since the panel settings are changed by bulk dump reception, be sure to save panel settings you want to keep to the Page Memory before receiving a bulk dump.


## AUTO ACCOMPANIMENT

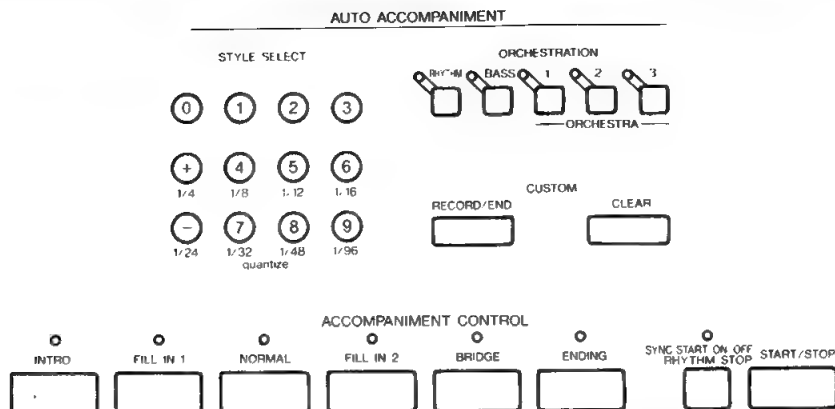


### ● STYLE SELECT

Select any of the PSR-84/PSR-85's 100 accompaniment styles by using one of the two following methods:

**1:** Choose one of the 100 accompaniment styles — numbered "00" through "99" — shown on the STYLE LIST then enter its number using the numeric STYLE SELECT buttons. To select BAROQUE (number 27), for example, first press "2" and then "7." The number "27" should then be displayed on the left two digits of the MULTI DISPLAY.

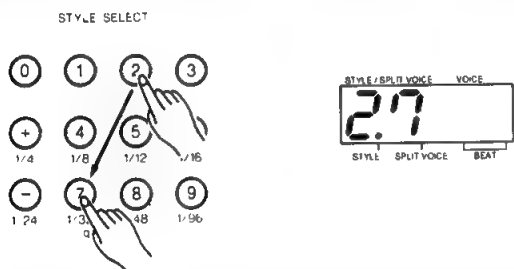

**2:** The [+] and [-] buttons in the STYLE SELECT group can be used to increment (increase by one) or decrement (decrease by one) the current accompaniment style number. Press the [+] button briefly to select the accompaniment style one number higher than the current accompaniment style, or the [-] button to select the accompaniment style one number lower than the current accompaniment style. If you hold the [+] or [-] button down, the accompaniment style number will increment or decrement continuously — simply release the button when the desired accompaniment style number has been reached.

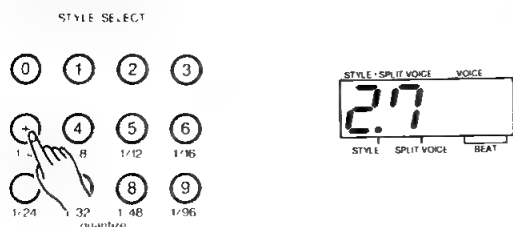


### ● ACCOMPANIMENT CONTROL

#### Starting the Accompaniment

Press the [START/STOP] button to start the selected accompaniment immediately. The rhythm sound will begin playing and, if the FINGERED or SINGLE FINGER mode is selected via the OVERALL CONTROL section MODE button, the bass and chord parts will also begin playing as soon as the first note or chord is played on the keyboard.

Press the [SYNC-START ON/OFF] button if you want the accompaniment to start when you play the first note on the keyboard. In this case the accompaniment is started by playing in the left-hand section of the keyboard if the FINGERED, SINGLE FINGER or SPLIT mode is selected, or by playing anywhere on the keyboard if the NORMAL mode is selected. If you press the [SYNC-START ON/OFF — RHYTHM STOP] button, the right two dots in the MULTI DISPLAY and the [SYNC-START ON/OFF — RHYTHM STOP] button indicator will flash at the current tempo. The synchro start mode can be re-engaged by pressing the [SYNC-START ON/OFF — RHYTHM STOP] button again so that its indicator goes out.

 - The right two dots in the MULTI DISPLAY will continue to flash while the rhythm plays to provide a visual indication of the current tempo.



- A different accompaniment style can be selected at any time while the accompaniment is playing. The style number display will change as soon as the selection is made, but the new style will begin playback from the top of the next measure. The tempo will not change when the new style begins playing.

## The NORMAL and BRIDGE Variations

Each style has two main variations — NORMAL and BRIDGE. If the [NORMAL] or [BRIDGE] button is pressed while the rhythm is playing, the corresponding variation will begin from the top of the next measure. You can also select [NORMAL] or [BRIDGE] before starting the accompaniment.



## Starting the Accompaniment with an Introduction

Any of the PSR-84/PSR-85 accompaniment patterns can be started with an appropriate introduction by pressing the [INTRO] button and then the [START/STOP] button.




Once the [INTRO] button is pressed, the [INTRO] indicator will be lit continuously and the [NORMAL] or [BRIDGE] indicator will flash to indicate which variation will play when the introduction has finished. You can change the “destination” variation by pressing the [NORMAL] or [BRIDGE] button while its indicator is flashing. When the introduction ends, the [INTRO] indicator will go out and the [NORMAL] or [BRIDGE] indicator will light continuously.

- It is possible to start the accompaniment from any variation — even the ending — by pressing the corresponding button prior to pressing the [START/STOP] button. The destination [NORMAL] or [BRIDGE] variation can be selected in the normal way.
- If the [INTRO], [FILL IN 1], [FILL IN 2], or [ENDING] pattern is selected prior to pressing the [START/STOP] button and then the same button is pressed again or the currently flashing [NORMAL] or [BRIDGE] button is pressed, its indicator will go out and the destination [NORMAL] or [BRIDGE] pattern indicator will light continuously. Once started the accompaniment will then begin directly from the NORMAL or BRIDGE pattern.
- The [INTRO] button can be used to select the introduction pattern even while the accompaniment is playing.

## Adding Fill-ins

The PSR-84 and PSR-85 provide two types of fill-ins (rhythmic variations) — one which leads to the NORMAL variation and one which leads to the BRIDGE variation. Press the [FILL IN 1] button at any time while the accompaniment is playing to add a short fill-in and go to (or return to) the NORMAL variation, or press the [FILL IN 2] button to add a short fill-in and go to (or return to) the BRIDGE variation.

The [NORMAL] indicator will flash while FILL IN 1 plays, and the [BRIDGE] indicator will flash while FILL IN 2 plays. You can change the variation that will begin playing after the fill-in by pressing the desired variation button while the indicator is still flashing.

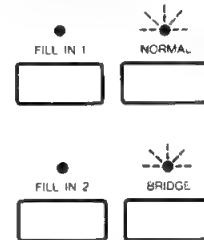

If you hold the [FILL IN 1] or [FILL IN 2] button, the fill-in pattern will repeat until the button is released, then the NORMAL or BRIDGE variation will begin from the beginning of the next measure.

- If the [FILL IN 1] or [FILL IN 2] button is pressed during the last 1/4-note of a measure, the fill in will begin from the first beat of the next measure. If pressed at any other time the fill-in will begin immediately.
- It is also possible to start the accompaniment with a fill-in by pressing the desired FILL IN button prior to pressing the [START/STOP] button. The destination [NORMAL] or [BRIDGE] variation can be selected in the normal way.

## Stopping the Accompaniment

An accompaniment in progress can be stopped immediately by pressing the [START/STOP] button or the [SYNC-START ON/OFF — RHYTHM STOP] button. In the latter case the synchro start mode will be engaged when the accompaniment stops. The accompaniment can also be stopped with an appropriate ending by pressing the [ENDING] button.



- The ending will begin from the first beat of the next measure.
- If the [FILL IN 1] or [FILL IN 2] button is pressed while the ending pattern is playing, a fill-in will be played, followed by a return to the normal or bridge pattern.


## ● THE SINGLE FINGER MODE

The SINGLE FINGER mode is selected via the [MODE] button in the OVERALL CONTROL section (see page 12).



SINGLE FINGER accompaniment makes it simple to produce beautifully orchestrated accompaniment using major, seventh, minor and minor-seventh chords by pressing a minimum number of keys in the left-hand section of the keyboard. The accompaniment produced is perfectly matched to the currently selected accompaniment style.

If you press a "C" key in the left-hand section of the keyboard, for example, a C-major accompaniment will be played. Press another key in the left-hand section of the keyboard to select a new chord. The key you press will always determine the "root" of the chord played (i.e. "C" for a C chord).

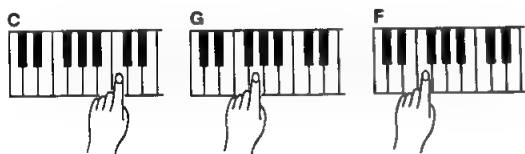

### Playing Minor, Seventh, and Minor-seventh Chords In the Single-finger Mode



- For a minor chord, press the root key and a black key to its left.
  - For a seventh chord, press the root key and a white key to its left.
  - For a minor-seventh chord, press the root key and both a white and black key to its left.
- The automatic accompaniment will continue playing even if you lift your fingers from the Auto Accompaniment keys. You only need to press the Auto Accompaniment keys when changing chords.
  - If the SINGLE FINGER mode is used while the accompaniment is stopped, the appropriate bass and chord sound will be produced when any left-hand keys are pressed. The bass voice is the same as the accompaniment bass voice. The chord voice can be selected using the VOICE SELECT buttons after a key in the left-hand section of the keyboard has been pressed. REVERB DEPTH (PSR-85 only), VOLUME, OCTAVE, and PAN settings will affect the chord voice, but the DUAL VOICE mode cannot be used.

## ● THE FINGERED MODE

The FINGERED mode is ideal if you already know how to play chords on a keyboard, since it allows you to supply your own chords for the Auto Accompaniment feature.



The PSR-84/PSR-85 will accept the following chord types:

| Chord                       | Abbreviation | Normal Voicing |
|-----------------------------|--------------|----------------|
| Major                       | M            | 1-3-5          |
| Minor                       | m            | 1-♭3-5         |
| Major seventh               | M7           | 1-3-(5)-7      |
| Suspended fourth            | sus4         | 1-4-5          |
| Minor sixth                 | m6           | 1-♭3-5-6       |
| Minor seventh               | m7           | 1-♭3-(5)-♭7    |
| Minor seventh flatted fifth | m7-5         | 1-♭3-♭5-♭7     |
| Minor major seventh         | mM7          | 1-♭3-(5)-7     |
| Seventh                     | 7            | 1-3-(5)-♭7     |
| Seventh flatted fifth       | 7-5          | 1-3-♭5-♭7      |
| Seventh suspended fourth    | 7sus4        | 1-4-5-♭7       |
| Augmented (seventh)         | aug          | 1-3-#5-(♭7)    |
| Diminished (seventh)        | dim          | 1-♭3-♭5-(6)    |

 
\* Notes in parentheses may be omitted.

Minor sixth chords will only be properly detected if they are played in "root position." Seventh flatted fifth chords will be recognized as long as either the root or flatted seventh is the lowest note. For diminished and augmented chords, the lowest key pressed is assumed to be the root.

- If you play two notes one octave apart on the left-hand section of the keyboard, that note will be taken as the root and the accompaniment will use only that note. If you play the root and fifth the accompaniment will use only the root and fifth.
- If you play three adjacent keys at once (semitone intervals), All accompaniment parts except for rhythm will be muted.
- If the FINGERED mode is used while the accompaniment is stopped, the appropriate bass note will be produced when a left-hand chord is detected, and the chord will sound as played. The chord voice can be selected using the VOICE SELECT buttons after a key in the left-hand section of the keyboard has been pressed. REVERB DEPTH (PSR-85 only), VOLUME, OCTAVE, and PAN settings will affect the chord voice, but the DUAL VOICE mode cannot be used.

## ● ORCHESTRATION

Accompaniment parts can be turned on or off by pressing the corresponding ORCHESTRA button. When a part is turned off the corresponding indicator will go out. To silence the bass part, for example, press the ORCHESTRATION [BASS] button so that its indicator goes out. Press the button again to turn that part back on.




- Depending on the selected style, all ORCHESTRATION buttons may not always contain data (the indicators will light even if the corresponding ORCHESTRATION button does not contain data).


## ● CUSTOM STYLE

The PSR-84/PSR-85 CUSTOM STYLE feature lets you create original accompaniment styles — one for each PAGE MEMORY — which are stored as style number 99 (PROGRAMMABLE). You can program separate patterns for the INTRO, NORMAL, BRIDGE, FILL IN 1, FILL IN 2, and ENDING variations.

1. Select one of the preset or custom styles on which you want to base your new custom style prior to activating the CUSTOM STYLE feature.
2. Press the CUSTOM [RECORD/END] button. Style number 99 will automatically be selected and the ACCOMPANIMENT CONTROL variation LEDs will flash in sequence. If you press the [RECORD/END] button again at this point recording will be cancelled and the previous style will be re-selected.

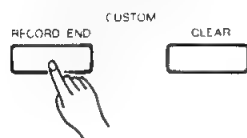


3. Select the variation you want to program by pressing the corresponding ACCOMPANIMENT CONTROL button.

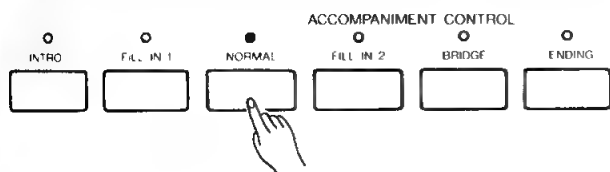

As soon as an ACCOMPANIMENT CONTROL variation button is pressed, the selected pattern will begin playing repeatedly (along with a metronome "click" sound which will not be recorded), based on a C chord.




- If you cancel recording at this point by pressing the [RECORD/END] button, any previously recorded CUSTOM STYLE data will be erased and the current style will be recorded in the CUSTOM STYLE memory.

4. The ORCHESTRATION buttons will be flashing in sequence. Select the part you want to program by pressing the corresponding ORCHESTRATION button. When an ORCHESTRATION button is pressed its indicator will light and the sound of that track will be emphasized. At this point you can press any other ORCHESTRATION button to select a different record track, as required. Further, by turning the selected track off, the ORCHESTRATION indicators will resume flashing in sequence and you can hear the overall volume balance of the accompaniment.

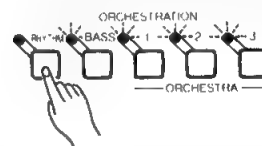

- The ORCHESTRATION [2] and [3] buttons each contain 2 tracks of data. Press either of these buttons once to select track A, and a second time to select track B. When the button is pressed a third time the part is turned off.

 5. You can now add new material to the selected part by playing on the keyboard. You can completely clear a part if you want to record new material from scratch: press the ORCHESTRATION button corresponding to the part you want to clear while holding the [CLEAR] button. Individual notes can be cleared by pressing the appropriate key while holding the [CLEAR] button. This technique is particularly useful when recording drum parts.

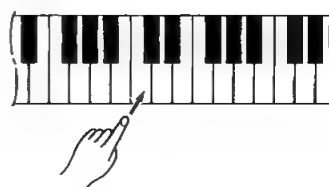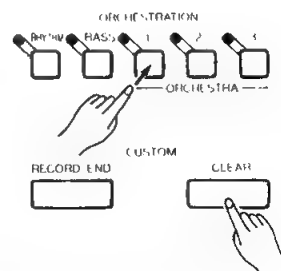



When recording the RHYTHM track only a percussion voice (numbers 94 through 99) can be selected. Any voice can be selected when recording any of the other tracks. Note, however, that a special transpose function is applied to the BASS track, so we recommend that you record a bass voice on the BASS track.

- Be sure to record your CUSTOM ACCOMPANIMENT based on a C chord. The parts will be automatically transposed to match the chord played when the CUSTOM ACCOMPANIMENT is played back.

The percussion voices (numbers 94 through 99) and the SYNTH TOM voice (number 76) differ in operation from the other voices in the following ways:

1. During automatic playback they are not transposed to match the current chord.
  2. They can be played during rhythm-only auto accompaniment playback in the NORMAL mode.
- If the DUAL function is engaged the above only apply if the percussion or SYNTH TOM voice is the main voice.

- The voice(s) assigned to the selected part can be changed by using the VOICE select keys in the normal way.
- The length of NORMAL, BRIDGE, INTRO, FILL, and ENDING variations is determined by the selected style.

6. Continue selecting and recording parts until the currently selected variation of your custom style is complete.

7. Press the CUSTOM [RECORD/END] button to stop recording. Your custom style will be automatically stored as style number 99, and can be selected and used in the same way as the preset styles.



- To record a different variation of the CUSTOM STYLE, repeat steps 2 through 7, above.
- The following data can be changed during CUSTOM STYLE recording:
  - NOTE ON/OFF including velocity.
  - TEMPO (the tempo setting that is active when recording is stopped is used).
  - All VOICE section parameters except MIDI Channel (Auto Harmony, Reverb Depth (PSR-85 only), Volume, Octave, Pan, Dual Voice) can be set independently for each track.
  - VOICE (including VOICE MEMORY) can be set independently for each track.
  - One set of voice parameters, including the voice number, are memorized at the beginning of each track. This means that 7 sets of voice parameters are memorized for each custom style variation — RHYTHM, BASS, ORCHESTRA 1, 2A, 2B, 3A, and 3B.
  - PITCH BEND (changes memorized in real time).
  - SUSTAIN (changes memorized in real time).

- Custom styles have a somewhat simpler format than the preset styles, so some of the preset style data is changed when used in a custom style. In other words, the preset style may not sound exactly the same when used in a custom style.

## Quantization

It is possible to set a quantize value before recording a part by pressing the appropriate STYLE SELECT key. The available quantize values are: 1/4, 1/6, 1/8, 1/12, 1/16, 1/24, 1/32, 1/48, 1/96. The selected quantize value forces all notes you play to fall on the nearest specified beat. If you select 1/8, for example, all notes you play will be aligned to the nearest eighth note. The selected quantize value will be shown on the display for approximately 2 seconds after the button is released.

One measure of 8th notes before quantization

 


After quantization



- The default quantize value is 1/96. This value is automatically selected whenever the CUSTOM STYLE record mode is engaged.
- Material that has already been recorded on a track will not be quantized. Only notes played after the quantization value has been changed will be quantized to that value.
- Quantization is applied to both note-on and note-off timing. In some cases the length of a quantized note may be reduced to an extremely short value of both the note-on and note-off timing of the same note are quantized to the same beat.

Before quantize





After quantize



Note-on and note-off are almost the same.

- When a CUSTOM STYLE has been recorded, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly recorded CUSTOM STYLE data will be lost when a different PAGE MEMORY is selected.
- If the CUSTOM STYLE memory becomes full during recording, "End" will appear on the MULTI DISPLAY and recording will end. Up to approximately 1,600 notes (including INTRO, FILL and other variations) can be recorded in each CUSTOM STYLE.

# VOICE

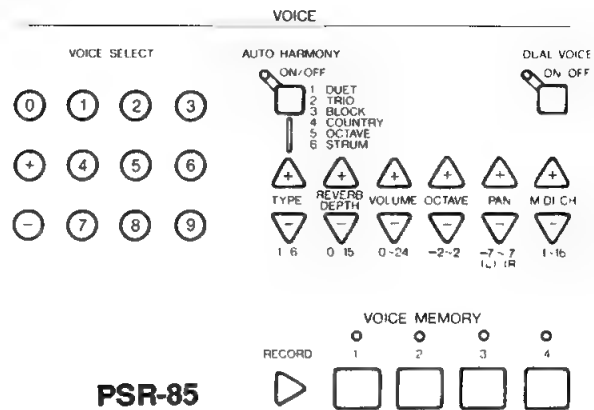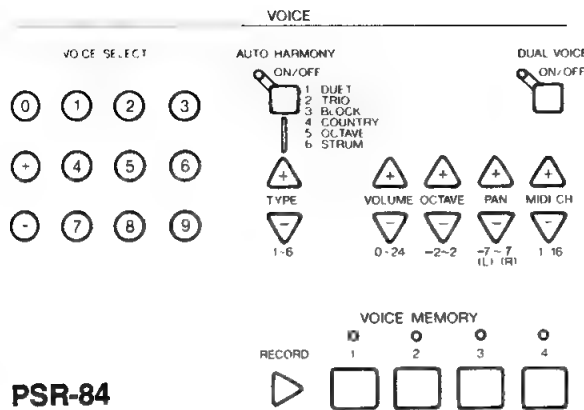


## VOICE SELECT

Select any of the PSR-84/PSR-85's 100 voices by using one of the following methods:


### Voice Selection Method 1:

Choose one of the 100 voices — numbered "00" through "99" — shown on the panel VOICE LIST then enter its number using the numeric VOICE SELECT buttons. To select "ELECTRONIC ORGAN 1" (number 12), for example, first press "1" and then "2." The number "12" should then appear on the right two digits of the MULTI DISPLAY.

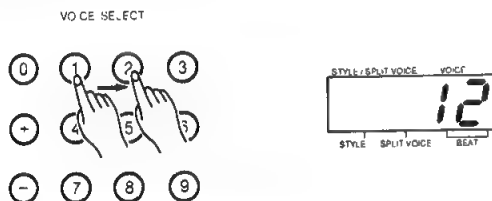

### Voice Selection Method 2:

The [+] and [-] buttons in the numeric VOICE SELECT button group can be used to increment (increase by one) or decrement (decrease by one) the current voice number. Press the [+] button briefly to select the voice one number higher than the current voice, or the [-] button to select the voice one number lower than the current voice. If you hold the [+] or [-] button down, the voice number will increment or decrement continuously — simply release the button when the desired voice number has been reached.

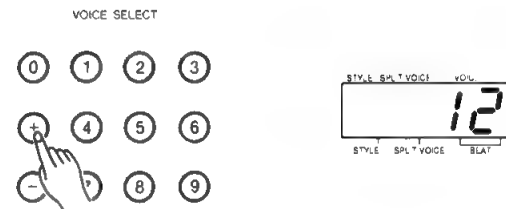

- Note that the PSR-84/PSR-85 keyboard has "touch response" — that is, you can control the loudness of the sound to a certain degree according to how hard you play the keys. The degree of touch sensitivity is different for each voice. For example, the piano and percussion voices are very responsive to keyboard touch, while the organ voices have no touch response at all.

## Keyboard Percussion

When any of the percussion voices is selected (voice numbers 94 through 99), you can play a range of drum and percussion instruments on the keyboard.

The percussion instruments played by the various keys when voice 98 PERCUSSIONS W/GATE or 99 PERCUSSIONS are selected are marked by symbols above the keys.

- The TRANSPOSE, TUNING, and OCTAVE functions described on pages 14 and 26 do not affect the percussion sounds. The percussion sounds are affected, however, by the PITCH BEND, PAN, and VOICE section VOLUME, REVERB DEPTH, MIDI CHANNEL, and HARMONY controls.

## DRUM & PERCUSSION INSTRUMENT KEY ASSIGNMENTS

### 94 SCRATCH W/PITCH

| Key   | Instrument |
|-------|------------|
| C1~C6 | Scratch    |

### 95 KICK & SNARE W/PITCH

| Key   | Instrument      |
|-------|-----------------|
| C1~B1 | Bass Drum Heavy |
| C2~B2 | Bass Drum Light |
| C3~B3 | Snare Low       |
| C4~B4 | Snare High      |
| C5~C6 | Synth Snare     |

### 96 TOM W/PITCH

| Key   | Instrument   |
|-------|--------------|
| C1~B2 | Acoustic Tom |
| C3~C6 | Synth Tom    |

### 97 LATIN PERCS W/PITCH

| Key   | Instrument |
|-------|------------|
| C1~B1 | Conga      |
| C2~B2 | Bongo      |
| C3~B3 | Timbale    |
| C4~B4 | Agogo      |
| C5~C6 | Cuica      |

### 98 PERCUSSIONS W/GATE

#### 99 PERCUSSIONS

| Key | Instrument       | Key | Instrument                 |
|-----|------------------|-----|----------------------------|
| C1  | Bass Drum Low    | G3  | Bongo Low                  |
| C#1 | Triangle Mute    | G#3 | Bongo High                 |
| D1  | Synth Snare      | A3  | Timbale Low                |
| D#1 | Triangle Open    | A#3 | Timbale High               |
| E1  | Synth Tom Bass   | B3  | Tambourine                 |
| F1  | Synth Tom Low    | C4  | Claves Low                 |
| F#1 | Synth Tom Middle | C#4 | Claves High                |
| G1  | Synth Tom High   | D4  | Agogo Low                  |
| G#1 | Bass Drum High   | D#4 | Agogo High                 |
| A1  | Bass Drum Middle | E4  | Cuica Low                  |
| A#1 | Closed Rim Shot  | F4  | Cuica High                 |
| B1  | Tom Bass         | F#4 | Whistle                    |
| C2  | Tom Low          | G4  | Brush Squeeze              |
| C#2 | Snare High       | G#4 | Hi-Hat Foot                |
| D2  | Tom Middle       | A4  | Snare Low with Gate Reverb |
| D#2 | Open Rim Shot    | A#4 | Voice 'One'                |
| E2  | Snare Low        | B4  | Voice 'Two'                |
| F2  | Tom High         | C5  | Voice 'Three'              |
| F#2 | Handclaps        | C#5 | Voice 'Four'               |
| G2  | Cowbell          | D5  | Scratch Low                |
| G#2 | Cabasa           | D#5 | Scratch High               |
| A2  | Hi-Hat Closed    | E5  | Bongo Mute                 |
| A#2 | Brush Hit        | F5  | Maracas                    |
| B2  | Hi-Hat Open      | F#5 | House Bass Drum            |
| C3  | Crash Cymbal     | G5  | House Snare Drum           |
| C#3 | Splash Cymbal    | G#5 | House Tom Bass             |
| D3  | Ride Cymbal 1    | A5  | House Tom Low              |
| D#3 | Ride Cymbal 2    | A#5 | House Tom Middle           |
| E3  | Conga Low        | B5  | House Tom High             |
| F3  | Conga High       | C6  | House Hi-Hat               |
| F#3 | Conga Mute       | —   | —                          |

## ● THE SPLIT MODE

The PSR-84/PSR-85 SPLIT mode — selected via the [MODE] button — allows you to play two voices at once: one with the left hand and one with the right. The left-hand voice can be played to the left of the “split point,” set as described in “SPLIT POINT CHANGE” on page 15, and the right-hand voice can be played to the right of the split point.

When the SPLIT mode is first selected the current voice is assigned to the right-hand keys. The right-hand voice number will be shown on the right two digits of the MULTI DISPLAY, and the left-hand voice number will appear on the left two digits of the MULTI DISPLAY when a key to the left of the split point is pressed for about 2 seconds (the “SPLIT VOICE” dot in the display also will light).


MODE  
○ NORMAL  
● SPLIT  
○ SINGLE  
○ FINGERED



## Changing the Right and Left-hand Voices

To change the right-hand voice press a key to the right of the split point, then select the new right-hand voice in the normal way.


To change the left-hand voice press a key to the left of the split point, then select the new left-hand voice in the normal way.

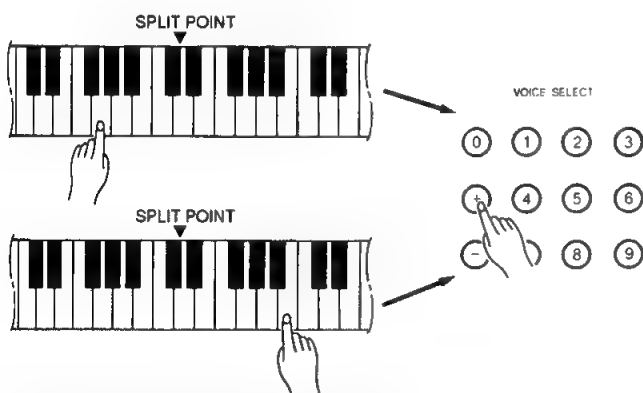

- When the SPLIT MODE is used with the DUAL VOICE function (see page 25) different dual voices can be assigned to the left- and right-hand sections of the keyboard. Press a key to the right of the split point to select the right-hand voice, then turn DUAL VOICE on and select the right-hand dual voice. Press a key to the left of the split point to select the left-hand voice, then turn DUAL VOICE on and select the left-hand dual voice.

## ● REVERB DEPTH (PSR-85 only)

 
The depth of the selected DSP effect can be increased or decreased for the selected voice by using the REVERB DEPTH [▲] or [▼] button. The reverb depth range is from 0 (no effect) to 15 (maximum reverb depth). The reverb depth is shown on the MULTI DISPLAY while the REVERB DEPTH [▲] or [▼] button is held, and for approximately 2 seconds after either REVERB DEPTH button is released. Pressing both the REVERB DEPTH [▲] and [▼] buttons simultaneously immediately selects reverb depth value 6.



- No effect is produced when the reverb depth is set to 0. From settings 1 to 8 the original sound is maintained at the same level while the level of the effect sound is increased. From settings 9 to 15 the effect level is maintained while the level of the original sound is reduced.
- In the SPLIT mode the left-hand voice reverb depth can be adjusted after playing a left-hand key and the right-hand voice reverb depth can be adjusted after playing a right-hand key.

## ● VOLUME

 Although the MASTER VOLUME control can be used to set the overall volume level, the VOLUME [▲] and [▼] buttons can be used to adjust the volume of the selected voice in relation to all other sound produced by the PSR-84/PSR-85 — i.e. accompaniment, song memory, etc. Press the [▲] button to increase the volume, or the [▼] button to decrease the volume. The selected volume level will be displayed on the MULTI DISPLAY while the volume is being adjusted, and for approximately 2 seconds after either VOLUME button is released.




The volume range is from 0 to 24, with 0 producing no sound while 24 is the highest volume. The default volume value (21) can be recalled at any time by pressing both the VOLUME [▲] and [▼] buttons at the same time.

- In the SPLIT mode the left-hand voice volume can be adjusted after playing a left-hand key and the right-hand voice volume can be adjusted after playing a right-hand key.

## ● OCTAVE

 
The OCTAVE [▲] and [▼] buttons can be used to shift the pitch of the selected voice up or down by one or two octaves. Press the [▲] button to shift the pitch up, or the [▼] button to shift the pitch down. The selected octave (-2, -1, 0, 1, or 2) will be displayed on the MULTI DISPLAY while the octave value is being adjusted, and for approximately 2 seconds after either OCTAVE button is released. A setting of 0 produces the normal pitch for the voice. The normal octave (0) can be recalled at any time by pressing both the OCTAVE [▲] and [▼] buttons at the same time.



- In the SPLIT mode the left-hand voice octave can be shifted after playing a left-hand key and the right-hand voice octave can be shifted after playing a right-hand key.
- The OCTAVE cannot be changed while the keyboard is being played.

## ● PAN

 The PAN [▲] and [▼] buttons can be used to pan the sound of the selected voice to any of 15 positions between full left and right in the stereo sound field. Press the [▲] button to pan the voice to the right, or the [▼] button to pan the voice to the left. The selected pan position will be displayed on the MULTI DISPLAY while the pan value is being adjusted, and for approximately 2 seconds after either PAN button is released.




The PAN range is from -7 (full left) through 0 (center) to 7 (full right). The center position (0) can be recalled at any time by pressing both the PAN [▲] and [▼] buttons at the same time. The new PAN value will take effect as soon as the next key is played.

- In the SPLIT mode the left-hand voice can be panned after playing a left-hand key and the right-hand voice can be panned after playing a right-hand key.

## ● MIDI CHANNEL

 The MIDI transmit channel for the selected voice is set via the MIDI CH. [▲] and [▼] buttons in the VOICE section. The [▲] button increments the transmit channel number and the [▼] button decrements the channel number. The current channel number is shown on the MULTI DISPLAY while selection is in progress and for approximately 2 seconds after both MIDI CH. buttons are released. The MIDI transmit channel range is from 1 to 16.




- Different transmit channels can be set for the left- and right-hand voices in the split mode — press a left-hand key prior to setting the left-hand transmit channel, and a right-hand key prior to setting the right-hand transmit channel.
- The MIDI CHANNEL cannot be changed while the keyboard is being played.

## ● DUAL VOICE

The DUAL VOICE feature makes it possible to select and play two different voices simultaneously.

To activate the DUAL VOICE feature press the [DUAL VOICE ON/OFF] button (the indicator will light). When ON, the voice selected prior to turning the DUAL VOICE feature ON will sound simultaneously with a second “dual” voice. Any voice can be selected as the dual voice while the DUAL feature is ON, and its number will be shown on the right two digits of the MULTI DISPLAY.


The DUAL VOICE feature can be turned OFF by pressing the [DUAL VOICE ON/OFF] button a second time.

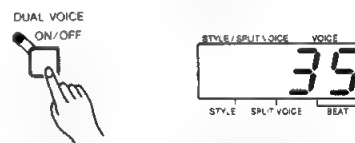

- The AUTO HARMONY function (see page 27) applies only to the main voice in the DUAL VOICE mode.
- Only main voice data is transmitted via the MIDI OUT connector on the specified MIDI channel for that voice (see above) in the DUAL VOICE mode.
- REVERB DEPTH (PSR-85), VOLUME, OCTAVE, and PAN can be set independently for the main and sub voices in the DUAL VOICE mode.
- In the SPLIT mode the left-hand dual voice can be selected after playing a left-hand key and the right-hand dual voice can be selected after playing a right-hand key.

## ● AUTO HARMONY

Auto Harmony can be used in the SPLIT, SINGLE FINGER, and FINGERED modes. It automatically adds appropriate harmony notes to a melody you play on the keyboard. You can choose from 6 different types of harmony.

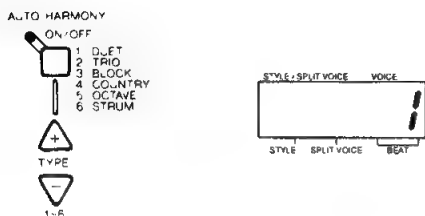

Use the AUTO HARMONY TYPE [▲] and [▼] buttons to select a harmony type between "1" and "6."

The selected harmony type number will be shown on the rightmost digit of the MULTI DISPLAY while the AUTO HARMONY TYPE [▲] or [▼] button is pressed.

Once the desired harmony type has been selected, press the [AUTO HARMONY ON/OFF] button so that its indicator lights to engage the AUTO HARMONY feature.

### PSR-84/PSR-85 Harmony Types

- 1 DUET
- 2 TRIO
- 3 BLOCK
- 4 COUNTRY
- 5 OCTAVE
- 6 STRUM


- The harmony produced is based on the chord played on the left-hand section of the keyboard in the FINGERED, SINGLE FINGER, or SPLIT modes. If no chord is detected, no harmony is produced.
- Only a single note can be played at a time on the keyboard (or the right-hand section of the keyboard) when the AUTO HARMONY feature is used.
- The harmony can be muted by playing any three consecutive notes on the left-hand section of the keyboard.
- Although a single note or an interval of a fifth can be used to produce FINGERED mode auto accompaniment, these are not recognized in the SPLIT mode.
- If AUTO HARMONY is used at the same time as the DUAL feature (see page 26), harmony will not be applied to the second "dual" voice.
- If AUTO HARMONY is used at the same time as the SPLIT feature (see page 25), harmony will not be applied to the left-hand voice.

## ● VOICE MEMORY

The PSR-84/PSR-85 VOICE MEMORY can be used to store 4 different sets of voice combinations — i.e. main, dual, and split voices — that can then be recalled simply by pressing a single button.

### Recording

Make the desired voice settings in the normal, dual, and split modes, then press one of the VOICE MEMORY buttons — [1] through [4] — while holding the [RECORD] button. The corresponding indicator will light indicating that the data has been memorized.

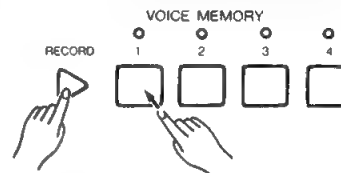


### Recall

To recall a VOICE MEMORY setting simply press the appropriate VOICE MEMORY button. The corresponding indicator will light and the required voice settings will be recalled. If you press the same VOICE MEMORY button a second time, its indicator will go out and the previous voice settings will be recalled.

- VOICE MEMORY recall operations can be recorded using the Custom Accompaniment, Song Memory (Melody), and Multi Pad (PSR-85) features. If the contents of the voice memory are changed while any of these are being played back, the new voices will take effect from the next time playback is started.

- VOICE MEMORY data will be retained in memory even when the PSR-84/PSR-85 power is turned off as long as a full set of good batteries is present or an AC power adaptor remains connected (see "PAGE MEMORY" on page 15 for more details).
- When a VOICE MEMORY has been recorded, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly recorded VOICE MEMORY data will be lost when a different PAGE MEMORY is selected.

## SONG MEMORY

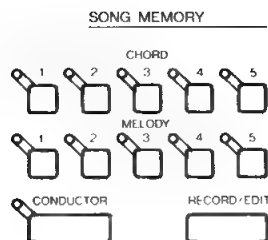

SONG MEMORY




The PSR-84/PSR-85 SONG MEMORY allows you to “record” and play back chord sequences created using the Auto Accompaniment feature and melody lines you play on the keyboard.

The SONG MEMORY also has five separate CHORD “banks” that can be used to record different accompaniments, and five MELODY banks that can be used to record different melodies or parts of a song. A “CONDUCTOR” function is also provided which allows the various banks can be “chained” — i.e. they will play back in any specified order. This allows you to record verses and choruses in different banks, for example, then “chain” them in the desired order for playback.

- Material recorded using the SONG MEMORY is retained in memory even when the POWER switch is turned OFF if batteries are present or an AC adaptor is connected (see “PAGE MEMORY” on page 15 for more details).
- Chord or melody parts recorded in the SONG MEMORY can be selected and played at any time while auto accompaniment is playing. Simply press a chord or melody memory button to play the corresponding part, then press the same button again to exit.
- When a SONG MEMORY recording has been finished, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly recorded SONG MEMORY data will be lost when a different PAGE MEMORY is selected.

## ● RECORDING A MELODY

1. Press one of the MELODY buttons — [1] through [5] — while holding the [RECORD] button. The corresponding MELODY indicator will flash, indicating that the SONG MEMORY is now in the record ready mode. The metronome will also begin to sound at the currently selected tempo, while the [SYNC-START ON/OFF] button indicator and the right two dots in the MULTI DISPLAY flash at the current tempo.

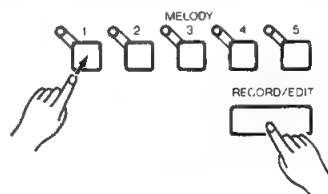

- If you have already recorded other MELODY or CHORD banks that you want to hear while recording the new melody bank, press the corresponding MELODY or CHORD buttons. The indicators of banks selected for playback will flash slowly.



2. Recording will begin as soon as you play a note on the keyboard or press the SONG MEMORY [PLAY/STOP] button or the ACCOMPANIMENT CONTROL [START/STOP] button.

3. Play the melody using the entire keyboard if the NORMAL mode is selected, or the keys to the right of the split point if the SPLIT, FINGERED, or SINGLE FINGER mode is selected.

- The rhythm part of the currently selected style will play automatically during recording. If you want to turn it off, press the ORCHESTRATION RHYTHM button.
- Some of the preset styles (and custom styles based on those presets) use percussion voices in parts other than the rhythm part. Use the corresponding ORCHESTRATION button if you want to turn the percussion voices off.

4. Stop recording by pressing the ACCOMPANIMENT CONTROL [START/STOP] or [ENDING] button, or the SONG MEMORY [PLAY/STOP] button.




• In addition to notes played on the keyboard, changes in the following data can be recorded by the SONG MEMORY MELODY banks:

- Pitch Bend
- Sustain on/off
- Voice Number (including VOICE MEMORY bank number)
- Auto Harmony (TYPE, ON/OFF)
- Octave
- Voice Volume
- Reverb Depth
- Pan
- Multi Pad Play/Terminate
- Dual Voice (Voice number, ON/OFF)


## Data Edit Mode

It is possible to change any of the above parameters for a specific track by pressing the appropriate MELODY track button twice while holding the [RECORD] button. The indicator of the selected track will flash slowly indicating that the track is in the edit ready mode. Press a key or the [PLAY/STOP] button and the track will play. You can now change the parameters while listening to the result. Changes affect that last occurrence of the corresponding parameter in the track, as shown in the examples below. The last parameter change takes priority. Press the [PLAY/STOP] button to exit when you're finished editing.

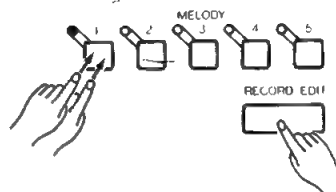


- It is also possible to listen to other recorded tracks while editing the selected track.
- Voice memory ON/OFF events cannot be added or edited in the data edit mode.

### Example 1

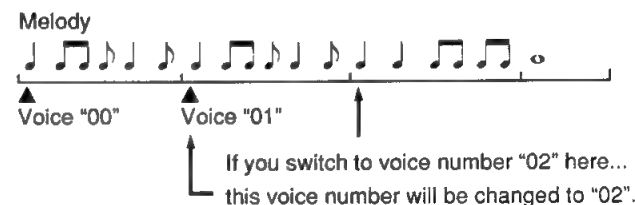


### Example 2

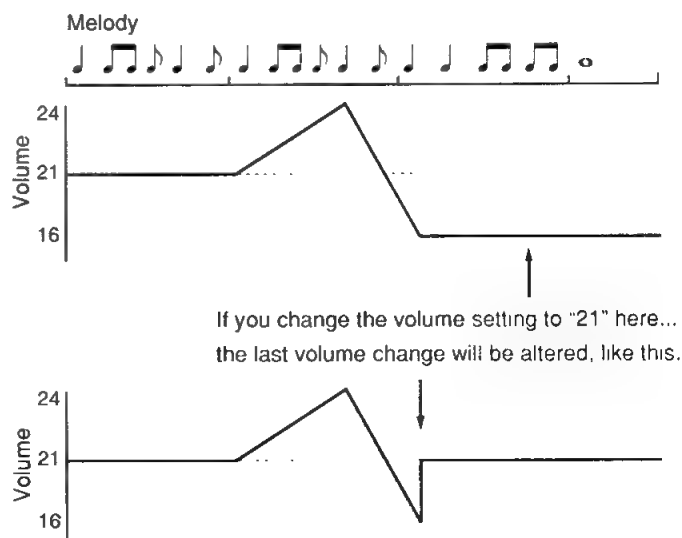


## ● RECORDING A CHORD SEQUENCE

1. Select an accompaniment style that is appropriate for the type of music you want to record.
2. Press one of the CHORD buttons — [1] through [5] — while holding the [RECORD] button. This engages the record ready mode for the selected bank. The selected CHORD bank indicator will flash, the metronome will sound, and the [SYNC-START ON/OFF] indicator and right two dots in the MULTI DISPLAY will flash at the currently selected tempo.

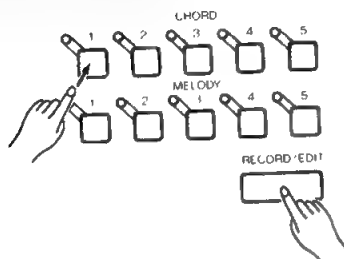

- If the NORMAL or SPLIT mode is selected, the FINGERED mode is automatically selected when the record ready mode is engaged. If the FINGERED or SINGLE FINGER mode is selected, no change occurs.
- If you have already recorded one or more MELODY banks that you want to hear while recording the CHORD bank, press the corresponding MELODY buttons as well. The indicators of MELODY banks selected for playback will flash slowly. MELODY banks that were turned on during CHORD bank playback will also be played back.
- It is also possible to record a MELODY bank at the same time as you record a CHORD bank — press the MELODY bank button to be recorded while holding the [RECORD] button before beginning recording of the CHORD bank.

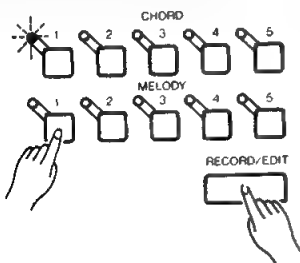

3. Recording will begin as soon as you play a chord or note on the left-hand section of the keyboard. If you've selected a MELODY bank to record with the CHORD bank, a right-hand note will also start the recording process.

Recording can also be started by pressing the ACCOMPANIMENT CONTROL [START/STOP] button or the SONG MEMORY [PLAY/STOP] button. In this case only the rhythm will begin without bass and chord accompaniment until you play the first chord or note on the left-hand section of the keyboard.

4. Play the required chords (FINGERED or SINGLE FINGER) in the left-hand section of the keyboard. If you've also selected a MELODY bank to be recorded, play the melody on the right-hand section of the keyboard.

You can also turn previously-recorded MELODY banks on and off while recording the CHORD bank, and these changes will be recorded along with the chord data.

5. Stop recording by pressing the ACCOMPANIMENT CONTROL [START/STOP] or [ENDING] button, or the SONG MEMORY [PLAY/STOP] button.

• In addition to chord changes, changes in the following data can be recorded by the SONG MEMORY CHORD banks:


- Normal, Bridge, and Ending Variations
- Fill-Ins
- MELODY Bank Switching
- Orchestration
- Style Number
- Accompaniment Volume (one setting only at the beginning of each bank)
- Tempo (one setting only at the beginning of each bank)

• The following data can be changed by using the Data Edit Mode.

- Accompaniment Volume
- Tempo

## Data Edit Mode

It is possible to change any of the above parameters for a specific track by pressing the appropriate CHORD track button twice while holding the [RECORD] button. The indicator of the selected track will flash slowly indicating that the track is in the edit ready mode. Press a key or the [PLAY/STOP] button and the track will play. You can now change the parameters as many times as required while listening to the result. The last parameter change takes priority. Press the [PLAY/STOP] button to exit when you're finished editing.

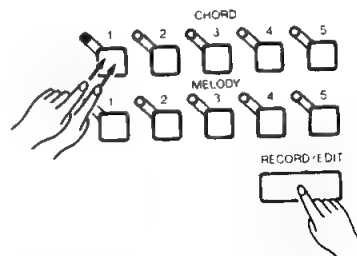


- It is also possible to listen to other recorded melody tracks while editing the selected track.

Whenever you record using the SONG MEMORY, any previously recorded material in the same bank will be erased.


If the power is turned off while recording, material recorded up to the point at which the power was disconnected will be retained in memory (the last event, however, may be lost). All data will be lost, however, if the power is not restored within approximately 10 minutes after disconnection if a good set of batteries is not installed (see "PAGE MEMORY" on page 16 for more details).

 If the SONG MEMORY becomes full while recording, "End" will appear on the MULTI DISPLAY and recording will stop. Up to approximately 700 notes can be recorded in each PSR-85 MELODY bank, and up to approximately 500 notes in each PSR-84 MELODY bank. Up to approximately 150 chords can be recorded in each PSR-84/PSR-85 CHORD bank.



## MELODY AND CHORD PLAYBACK

- Any number of MELODY banks and/or one CHORD bank can be played back at the same time. Press the buttons corresponding to the MELODY and/or CHORD banks you want to play back — the indicators of the selected banks will flash.

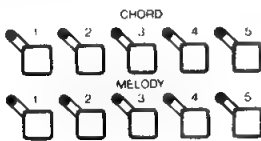

- Playback will begin as soon as a key on the keyboard, the SONG MEMORY [PLAY/STOP] button, or the ACCOMPANIMENT CONTROL [START/STOP] button is pressed. If you press a different bank button during playback, playback of the newly selected bank will begin from the top of the next measure.



- If you press a MELODY or CHORD bank button while an accompaniment style is already playing, the selected melody or chord sequence will begin playing from the beginning of the next measure. You can return to the accompaniment by pressing the same CHORD bank button a second time. The accompaniment will resume playing from the beginning of the next measure. A melody that is playing can be stopped by pressing the same MELODY button a second time.
- If you select a CHORD bank during auto accompaniment, the NORMAL mode will be automatically selected. The FINGERED or SINGLE FINGER mode will be automatically re-selected when you return to the auto accompaniment.
- When a CHORD bank is selected during auto accompaniment, the style, tempo, accompaniment volume, orchestration, and accompaniment control settings recorded in the selected CHORD bank will be used even after you return to the auto accompaniment.

- Play along on the keyboard if you like. You can also change the tempo during playback.
- Individual MELODY banks can be stopped during playback by pressing their buttons. If you press a CHORD bank button while it is playing, that bank will stop playing at the top of the next measure and auto accompaniment will begin (the last chord will remain active until a new chord is played). The mode that was engaged immediately prior to activating CHORD playback will be automatically recalled.
- MELODY playback will stop automatically when all recorded data has been played back. CHORD banks that were not recorded with a complete ending will repeat until stopped (if you pressed the [PLAY/STOP] button before the ending finished the bank will play repeatedly). You can also stop playback at any time by pressing the SONG MEMORY [PLAY/STOP] button or the ACCOMPANIMENT CONTROL [START/STOP] button.


- If memory playback is stopped by pressing a MELODY or CHORD button, that track will be turned off but the rhythm will not stop. Use the [PLAY/STOP] if you want to stop the rhythm at the same time.

## ● THE CONDUCTOR

The SONG MEMORY CONDUCTOR function allows CHORD and MELODY banks to be “chained” and automatically played back in any order.

### Recording

1. Press the [CONDUCTOR] button while holding the [RECORD] button to engage the CONDUCTOR record ready mode. The [CONDUCTOR] button indicator will flash. The indicators of all CHORD and MELODY banks that contain recorded data will also flash.

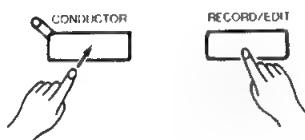

- The CONDUCTOR record ready mode can not be engaged if none of the CHORD and MELODY banks contain data.

2. Press the CHORD and/or MELODY bank buttons that you want to begin playback with — the selected bank indicators will light continuously.
3. Press the SONG MEMORY [PLAY/STOP] button to begin recording.




4. Press the CHORD and MELODY bank buttons at the appropriate times in the order that you want them to play (playback will actually begin from the beginning of the next measure). Any MELODY bank on/off events recorded in a chord bank remain active in a CONDUCTOR chain.
5. Recording will end when a complete ending in the data is encountered, or when the SONG MEMORY [PLAY/STOP] button is pressed.

- If the memory becomes full during CONDUCTOR recording, “End” will appear on the MULTI DISPLAY and recording will stop. The CONDUCTOR memory capacity is approximately 200 “events” — each button press (on or off) is an event.


### Playback

1. To playback the CONDUCTOR sequence simply press the [CONDUCTOR] button so that its indicator flashes, and then press the SONG MEMORY [PLAY/STOP] button.

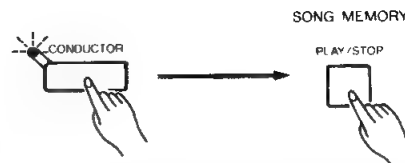

2. CONDUCTOR playback will stop automatically when the end of the sequence is reached. You can also stop playback at any time by pressing the SONG MEMORY [PLAY/STOP] button.


## THE MULTI PADS (PSR-85)

 

The PSR-85 MULTI PADS can be used to record short rhythmic or melodic sequences, percussion fill-ins, or single percussion sounds that can be played at any time simply by pressing the appropriate pad.

### Recording

1. Select the voice you want to use, then press one of the MULTI PAD buttons — [1] through [4] — while holding the MULTI PAD [RECORD/END] button. The [RECORD/END] button indicator will flash to indicate that the record ready mode is engaged, and the metronome will begin to sound.

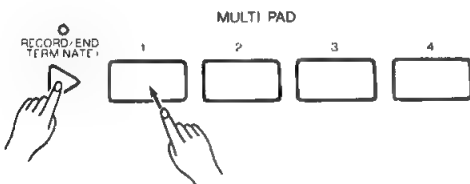

- The NORMAL mode is automatically selected when recording is started.

2. Play a short sequence.
3. Press the MULTI PAD [RECORD/END] button to stop recording. Recording will also stop automatically and "End" will appear on the MULTI DISPLAY when the pad memory becomes full.
  - Each MULTI PAD can record up to approximately 70 consecutive quarter notes. Pitch bend, program change, and other operations reduce the number of notes that can be recorded.

- The following data is recorded in the MULTI PAD memory:

- Note on/off and velocity.
- Auto Harmony on/off and type.
- Reverb depth.
- Volume.
- Octave.
- Pan.
- Dual.
- Voice Number (including VOICE MEMORY bank number).


### Playback

 Simply tap any of the MULTI PADS at any time to play back the data they contain. MULTI PAD playback begins as soon as the button is pressed.

MULTI PAD playback can be terminated by pressing the [RECORD/END (TERMINATE)] button.

- MULTI PAD playback speed is determined by the current TEMPO setting.
- The contents of the MULTI PAD memory are retained in memory even when the power is turned off (see "PAGE MEMORY" on page 15 for details).
- When a MULTI PAD has been recorded, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly recorded MULTI PAD data will be lost when a different PAGE MEMORY is selected.


## THE DRUM PADS (PSR-84)




The PSR-84 DRUM PADS can be used to record single drum and percussion notes that can be played at any time simply by pressing the appropriate pad.

### Recording

1. Press the [PAD ASSIGN ON/OFF] button — the indicator will light and the last selected PERCUSSION voice (94 through 99) will automatically be selected (any of the other percussion voices — 94 through 99 — can also be selected at this point).

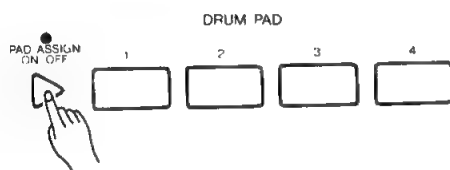

2. Press one of the PAD buttons — [1] through [4] — while holding the key corresponding to the percussion sound you want to record. This records the selected percussion sound in the selected PAD button. The velocity with which the key is played is also recorded. Continue and record all four PAD buttons, changing voices (94 — 99) as required.

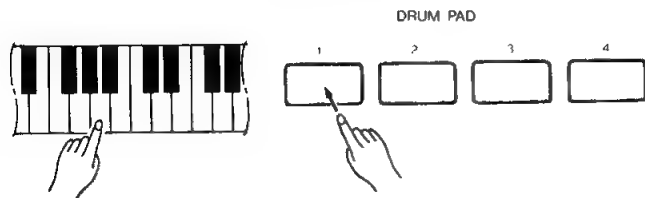


3. Press the [PAD ASSIGN ON/OFF] button to exit from the pad assign mode.

### Playback

Simply tap any of the DRUM PADS at any time to playback the data they contain.


- The contents of the DRUM PAD memory are retained in memory even when the power is turned off (see "PAGE MEMORY" on page 15 for details).
- When a DRUM PAD has been recorded, be sure to store the new data to a PAGE MEMORY (see page 15). If this is not done the newly recorded DRUM PAD data will be lost when a different PAGE MEMORY is selected.

## MIDI

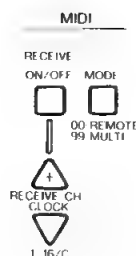

## ● RECEIVE CHANNEL/CLOCK

The enable/disable status of all MIDI receive channels is set via the MIDI section RECEIVE CH./CLOCK [▲] and [▼] buttons. The [▲] button increments the receive channel number shown on the display and the [▼] button decrements the receive channel number. The receive channel number is shown on the right two digits of the MULTI DISPLAY while the status — “E” for enabled or “d” for disabled — appears on the leftmost digit. The MIDI channel and status display appears while selection is in progress and for approximately 2 seconds after both MIDI CH. buttons are released. A “C” in place of the channel number (1 through 16) stands for “CLOCK,” and allows reception of the MIDI clock to be turned on or off. If the [RECEIVE ON/OFF] button is used while the MIDI receive channel or clock display is showing, the status of the channel or clock can be switched between “E” and “d.”

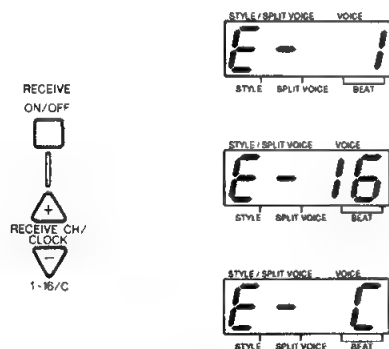

- Receive channel/clock settings apply to both the Remote Control and Multi Voice receive modes.
- Separate receive channel/clock settings are retained in each PAGE MEMORY even when the power is turned off (see “PAGE MEMORY” on page 16 for details).

## ● MODE

The [MODE] button is used to select the MIDI receive mode in which the PSR-84/PSR-85 is to operate — Remote Control or Multi Voice.

Press the [MODE] button to call the mode display, then use the same button to select “00” (Remote Control) or “99” (Multi Voice).



- The MIDI MODE is automatically reset to “00” whenever the power is turned on, when a different PAGE MEMORY is selected, or when the DEMO function is used.

## ■ The Remote Control Mode (Mode 00)

The Remote Control mode should be used when the PSR-84/PSR-85 is to be connected to a second keyboard by which it is to be controlled. In this mode playing the external keyboard has exactly the same effect as playing the PSR-84/PSR-85's own keyboard. Further the PSR-84/PSR-85 panel controls can be used as normal. This mode is automatically selected whenever the PSR-84/PSR-85 is turned on, when a different PAGE MEMORY is selected, or when the DEMO function is used.

### Data Received in the Remote Control Mode

The PSR-84/PSR-85 receives and responds to the following data received via the MIDI IN connector when the Remote Control mode is selected:

- In addition to note and velocity data, the PSR-84/PSR-85 responds to program change, sustain ON/OFF, vibrato, volume, pan, reverb (PSR-85 only), start, stop, and MIDI clock messages.
- Program change messages 00 through 99 correspond to voices 00 through 99.



- See page 37 for details on control change messages.
- Program change and control change data only affects the main voice in the NORMAL mode (the right-hand voice when the SPLIT mode is selected) when the DUAL function is engaged.
- MIDI start messages control PSR-85 auto accompaniment, song memory play or record start, and conductor play or record start in the same way as the panel [START/STOP] button.
- MIDI stop messages have the same effect as pressing the panel [START/STOP] button when a function is running.
- When a single receive channel is selected, reception only occurs on the specified channel.
- Transpose settings affect received MIDI note numbers.
- Pitch bend data from 00H 00H to 7FH 7FH is received, with 00H 00H corresponding to minimum and 7FH 7FH to maximum pitch bend wheel position. The panel pitch bend range setting affects the received pitch bend data.
- External synchronization is automatically selected when MIDI clock is received if clock reception is turned on. If the external MIDI clock data is not received, internal clock operation is automatically resumed.
- If the TEMPO [▲] or [▼] button is pressed during external sync mode is engaged, "EC" (External Clock) will appear on the display. In this state the TEMPO value cannot be changed.

### ■ The Multi Voice Mode (Mode 99)

The Multi mode should be used when the PSR-84/PSR-85 is to be used as a multi-timbral tone generator, for example, receiving data from a second MIDI device (such as a sequencer). In this mode the PSR-84/PSR-85 can receive on multiple MIDI channels, each channel corresponding to a different voice. In this mode local keyboard performance and the VOICE section settings function normally regardless of received MIDI data. Since the PSR-84/PSR-85 employs the Yamaha Dynamic Voice Allocation system, it is not necessary to specify the number of notes that can be played via each channel.

- When the Multi Voice mode is selected, the following panel features can not be used:
  - SONG MEMORY
  - MULTI PAD (PSR-85)
  - AUTO ACCOMPANIMENT & ACCOMPANIMENT CONTROL
  - CUSTOM ACCOMPANIMENT
  - TEMPO & ACCOMPANIMENT VOLUME

### Data Received In the Multi Voice Mode

In the Multi mode the PSR-84/PSR-85 functions as a multi-timbre tone generator, allowing different voices to be played on all 16 MIDI channels.

 
- Program change messages 00 through 99 correspond to voices 00 through 99.

- MIDI note, velocity, and other channel messages received on a MIDI channel will affect only the voice selected for that channel.
- Velocity sensitivity for each voice is the same as when the voices are played via the PSR-84/PSR-85 keyboard.
- The panel TRANSPOSE setting does not affect the received MIDI data.
- The tuning and DSP settings affect the received note data.
- Pitch bend data is received independently for each channel. The panel PITCH BEND RANGE setting applies to all channels.
- Sustain on/off, reverb depth, volume, vibrato, and pan messages are accepted for each channel. See page 37 for details.
- MIDI start, stop, and clock data will be ignored.
- The program change, control change, and pitch bend status of each channel are reset whenever the power is turned on or the mode is switched from "00" to "99." The default program change value is "00" (PIANO). the default pitch bend value is "center." See page 37 for default control change values.

## ● System Exclusive Reception

System exclusive data can be received from an external device via a bulk dump operation when the MIDI receive mode is set to "00."

- All panel controls are locked during reception, and all panel settings will be replaced by the received data. Once received, the new panel settings must be recorded to a PAGE MEMORY or they will be lost.
- The data formats of the system exclusive messages are:
  - PSR-84: F0H -> 43H -> 76H -> 09H -> BULK DATA -> F7H
  - PSR-85: F0H -> 43H -> 76H -> 0AH -> BULK DATA -> F7H
- If an error is detected during reception "Err" will appear on the MULTI DISPLAY. If this occurs, try receiving the data again.



- See "Page Memory MIDI Bulk Dump" on page 17 for details on bulk dump transmission.

## ● Transmitted Data

The following data is transmitted via the MIDI OUT connector when either the Remote Control or Multi Voice mode is selected:

- The transmit channel for each voice is set using the MIDI CHANNEL button described on page 26.
- All notes played on the keyboard, including velocity data. In the SPLIT mode the left- and right-hand voices are transmitted on their respective transmit channels.
- In the FINGERED or SINGLE FINGER mode, only data corresponding to notes played on the right-hand section of the keyboard is transmitted.
- Transmitted note numbers are affected by the Transpose setting.
- Transmitted note numbers are affected by the octave setting.
- Program change and control change data will not be transmitted if the DUAL function is engaged. Turn DUAL off if you want this data to be transmitted.
- Pitch bend data. The actual pitch bend data range is determined by the pitch bend range setting. If the pitch bend range is set to 12, for example, data from 00H 00H to 7FH 7FH will be transmitted. If the pitch bend range is set to 1, data from 3CH 3AH to 20H 45H will be transmitted.
- The MIDI program change number corresponding to the number of the selected voice is transmitted when a voice is selected.
- MIDI control change messages corresponding to reverb (PSR-85 only), pan, volume, and sustain are transmitted when these functions are operated. For details refer to \* below.
- A MIDI START message is transmitted whenever the rhythm or accompaniment is started, and a MIDI STOP message is transmitted whenever the rhythm or accompaniment is stopped. The same applies to demo and song memory start/stop operations.
- Style, custom style, demo, multi pad (PSR-85), drum pad (PSR-84), notes added by the auto harmony function, and song memory playback are not transmitted.
- When a VOICE MEMORY button is pressed, the program change and control change data corresponding to that voice is transmitted. The previous panel data is transmitted when a VOICE MEMORY is turned off.

## \* Control Change Data Value Specifications (receive and transmit, both modes)

Data Format : BnH -> cc -> vv  
 BnH: Control Event (n=channel number)  
 cc : Control Number  
 vv : Control Value

### cc=01H ; vibrato

vv= 00H - 0FH : 0 (off)  
 10H - 1FH : 1 (min)  
 20H - 2FH : 2  
 30H - 3FH : 3  
 40H - 4FH : 4  
 50H - 5FH : 5  
 60H - 6FH : 6  
 70H - 7FH : 7 (max)

Each voice has its own default value that is used when the voice is initially selected.

### cc=07H ; volume

vv= 7FH : 24 (Panel Value ; max)  
 01H : 01 (-24dB)  
 00H : 00 (no sound)

The default value when no data is being transmitted is 6F (panel value: 21).

### cc=0AH ; pan

vv= 00H - 07H : -7 (Left Most)  
 08H - 0FH : -6  
 10H - 17H : -5  
 18H - 1FH : -4  
 20H - 27H : -3  
 28H - 2FH : -2  
 30H - 37H : -1  
 38H - 47H : 0 (Center)  
 48H - 4FH : 1  
 50H - 57H : 2  
 58H - 5FH : 3  
 60H - 67H : 4  
 68H - 6FH : 5  
 70H - 77H : 6  
 78H - 7FH : 7 (Right Most)

The default value is "center" when no data is being transmitted.

### cc=40H ; sustain

vv= 00H - 3FH : off  
 40H - 7FH : on

Default is off.

### cc=5BH ; reverb (PSR-85 only)

vv= 00H - 07H : 0 (Off)  
 08H - 0FH : 1  
 10H - 17H : 2  
 18H - 1FH : 3  
 20H - 27H : 4  
 28H - 2FH : 5  
 30H - 37H : 6 (Default)  
 38H - 3FH : 7  
 40H - 47H : 8  
 48H - 4FH : 9  
 50H - 57H : 10  
 58H - 5FH : 11  
 60H - 67H : 12  
 68H - 6FH : 13  
 70H - 77H : 14  
 78H - 7FH : 15 (max)

### cc=7BH ; all notes off

vv= 00H (fixed)

### DEMO

DEMO



To give you an idea of the PSR-84/PSR-85's sophisticated capabilities, it is programmed with 3 demonstration songs that you can select and play.

1. Press the DEMO [1], [2], or [3] button to start playback of the corresponding demo.

DEMO



2. Press the same DEMO button a second time or the [START/STOP] button to stop demo playback.

The demonstration will play continuously until the DEMO button is pressed.

\* If the MIDI MODE is set to "99," it will be reset to "00" when DEMO playback is started.

MIDI, the Musical Instrument Digital Interface, is a world-standard communication interface that allows MIDI-compatible musical instruments and equipment to share musical information and control one another. This makes it possible to create "systems" of MIDI instruments and equipment that offer far greater versatility and control than is available with isolated instruments.

## The PSR-84/PSR-85 MIDI Connectors

The PSR-84/PSR-85 MIDI IN connector receives MIDI data from an external MIDI device which can be used to control the PSR-84/PSR-85. The MIDI OUT connector transmits MIDI data generated by the PSR-84/PSR-85 (e.g. note and velocity data produced by playing the keyboard).

 


## Simple MIDI Control

Most MIDI keyboards (including the PSR-84 and PSR-85, of course) transmit note and velocity (touch response) information via the MIDI OUT connector whenever a note is played on the keyboard. If the MIDI OUT connector is connected to the MIDI IN connector of a second keyboard (synthesizer, etc.) or a tone generator (essentially a synthesizer with no keyboard), the second keyboard or tone generator will respond precisely to notes played on the original transmitting keyboard. The result is that you can effectively play two instruments at once, providing thick multi-instrument sounds. The PSR-84/PSR-85 also transmits "program change" data when one of its voices is selected. Depending on how the receiving device is set up, the corresponding voice will be automatically selected on the receiving keyboard or tone generator whenever a voice is selected on the PSR-84/PSR-85.




The PSR-84/PSR-85 is capable of receiving the same MIDI data, so a second MIDI keyboard connected to the PSR-84/PSR-85 MIDI IN connector can be used to remotely play the PSR-84/PSR-85 and select voices as required.



## MIDI Sequence Recording


The same type of musical information transfer described above is used for MIDI sequence recording. A MIDI sequence recorder can be used to "record" MIDI data received from a PSR-84/PSR-85, for example. When the recorded data is played back, the PSR-84/PSR-85 automatically "plays" the recorded performance in precise detail.

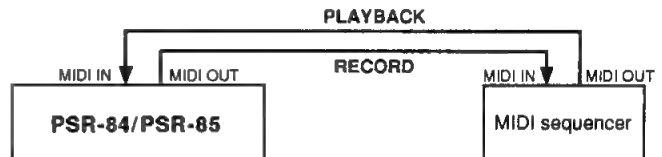

**Note:** Never use MIDI cables longer than about 15 meters, since cables longer than this can pick up noise which can cause data errors.


## MIDI Bulk Dump

MIDI bulk dump operations allow large amounts of MIDI data to be transmitted from one device to another. The entire contents of the PSR-84/PSR-85 PAGE MEMORY, for example, can be dumped to a second PSR-84/PSR-85 or to a bulk storage device such as a MIDI data recorder or MIDI computer.

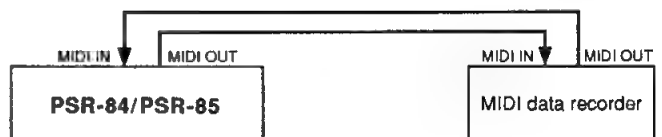

# APPENDIX B: POLYPHONY

 The PSR-84 and PSR-85 feature a maximum polyphony of 28-notes, so up to 28 notes can be played on simultaneously. This 28-note maximum applies to all PSR-84/PSR-85 features, including automatic accompaniment, song memory, the multi pads, etc. If more than 28 notes are played at any one time, the extra notes will not sound and "CFull" will appear on the MULTI DISPLAY to indicate that the maximum polyphony has been exceeded.



Some of the PSR-84/PSR-85's voices are actually combinations of two or more voices. These voices therefore only allow half (or less) the normal 28-note maximum. The following is a list of the number of voices used by each of the PSR-84/PSR-85 voices.

## VOICE/POLYPHONY LIST

| Voice Name                        | Used Voices | Voice Name                | Used Voices | Voice Name                   | Used Voices |
|-----------------------------------|-------------|---------------------------|-------------|------------------------------|-------------|
| 00 PIANO .....                    | 1           | 34 CELLO .....            | 1           | 68 SAMBA WHISTLE .....       | 1           |
| 01 FLANGE PIANO .....             | 2           | 35 STRINGS 1 .....        | 2           | 69 SAX ENSEMBLE 1 .....      | 2           |
| 02 HONKY-TONK PIANO .....         | 2           | 36 STRINGS 2 .....        | 2           | 70 SAX ENSEMBLE 2 .....      | 3           |
| 03 ELECTRIC PIANO 1 .....         | 2           | 37 ORCHESTRA HIT .....    | 1           | 71 WOODWIND ENSEMBLE .....   | 3           |
| 04 ELECTRIC PIANO 2 .....         | 2           | 38 HARP .....             | 1           | 72 CHORUS .....              | 2           |
| 05 ELECTRIC PIANO 3 .....         | 2           | 39 BANJO .....            | 1           | 73 SYNTH LEAD .....          | 2           |
| 06 HARPSICHORD 1 .....            | 1           | 40 VIBRAPHONE .....       | 2           | 74 SYNTH BRASS .....         | 2           |
| 07 HARPSICHORD 2 .....            | 2           | 41 MARIMBA .....          | 1           | 75 SYNTH STRINGS .....       | 2           |
| 08 CLAVI .....                    | 1           | 42 STEEL DRUM .....       | 1           | 76 SYNTH TOM .....           | 1           |
| 09 CELESTA .....                  | 1           | 43 TRUMPET .....          | 1           | 77 FANTASY 1 .....           | 4           |
| 10 PIPE ORGAN 1 .....             | 2           | 44 MUTE TRUMPET 1 .....   | 2           | 78 FANTASY 2 .....           | 2           |
| 11 PIPE ORGAN 2 .....             | 2           | 45 MUTE TRUMPET 2 .....   | 1           | 79 FANTASY 3 .....           | 4           |
| 12 ELECTRONIC ORGAN 1 .....       | 2           | 46 MUTE TRUMPET 3 .....   | 1           | 80 BELL STRINGS .....        | 4           |
| 13 ELECTRONIC ORGAN 2 .....       | 2           | 47 TROMBONE .....         | 1           | 81 SEQ PAD .....             | 3           |
| 14 ELECTRONIC ORGAN 3 .....       | 2           | 48 FLUGELHORN .....       | 1           | 82 ELECTRIC BASS 1 .....     | 1           |
| 15 ELECTRONIC ORGAN 4 .....       | 2           | 49 HORN .....             | 1           | 83 ELECTRIC BASS 2 .....     | 1           |
| 16 ACCORDION 1 .....              | 2           | 50 TUBA .....             | 1           | 84 FRETLESS BASS .....       | 1           |
| 17 ACCORDION 2 .....              | 2           | 51 BRASS ENSEMBLE 1 ..... | 3           | 85 MUTE BASS .....           | 1           |
| 18 ELECTRIC GUITAR 1 .....        | 2           | 52 BRASS ENSEMBLE 2 ..... | 3           | 86 MUTE BASS ECHO .....      | 2           |
| 19 ELECTRIC GUITAR 2 .....        | 1           | 53 PICCOLO .....          | 1           | 87 SLAP BASS .....           | 1           |
| 20 ELECTRIC GUITAR 3 .....        | 1           | 54 FLUTE .....            | 1           | 88 WOOD BASS 1 .....         | 1           |
| 21 TREMOLO GUITAR .....           | 2           | 55 CLARINET .....         | 1           | 89 WOOD BASS 2 .....         | 1           |
| 22 ELECTRIC 12STRING GUITAR ..... | 2           | 56 BASS CLARINET .....    | 1           | 90 SYNTH BASS 1 .....        | 1           |
| 23 DISTORTION GUITAR .....        | 2           | 57 OBOE .....             | 1           | 91 SYNTH BASS 2 .....        | 1           |
| 24 JAZZ GUITAR .....              | 1           | 58 ENGLISH HORN .....     | 1           | 92 SYNTH BASS 3 .....        | 1           |
| 25 JAZZ GUITAR OCTAVE .....       | 2           | 59 BASSOON .....          | 1           | 93 BOWED BASS .....          | 1           |
| 26 MUTE GUITAR .....              | 1           | 60 SOPRANO SAX .....      | 1           | 94 SCRATCH W/PITCH .....     | 1           |
| 27 MUTE GUITAR ECHO .....         | 2           | 61 ALTO SAX .....         | 1           | 95 KICK&SNARE W/PITCH .....  | 1           |
| 28 STEEL GUITAR .....             | 1           | 62 TENOR SAX .....        | 1           | 96 TOM W/PITCH .....         | 1           |
| 29 FOLK GUITAR .....              | 1           | 63 BARITONE SAX .....     | 1           | 97 LATIN PERCS W/PITCH ..... | 1           |
| 30 12STRING GUITAR .....          | 2           | 64 OCARINA .....          | 1           | 98 PERCUSSIONS W/GATE .....  | 1           |
| 31 GUT GUITAR .....               | 1           | 65 PANFLUTE .....         | 1           | 99 PERCUSSIONS .....         | 1           |
| 32 VIOLIN 1 .....                 | 1           | 66 RECORDER .....         | 1           |                              |             |
| 33 VIOLIN 2 .....                 | 1           | 67 HARMONICA .....        | 1           |                              |             |

## APPENDIX C: TROUBLESHOOTING

Something not working as it should? In many cases what appears to be a malfunction can be traced to a simple error that can be remedied immediately. Before assuming that your PSR-84/PSR-85 is faulty, please check the following points.

### 1. PROBLEM

- The PSR-84/PSR-85 speakers produce a "pop" sound whenever the power is turned ON or OFF.

#### CHECK

- This is normal and is no cause for alarm.

### 2. PROBLEM

- No sound.

#### CHECK

- Is the MASTER VOLUME control turned up high enough?
- Is the power turned on? The Auto Power Off function automatically turns off the power if no buttons or keys are pressed for more than about 10 minutes when running the PSR-84/PSR-85 from batteries.
- Are a pair of headphones plugged into the PHONES jack? Have you accidentally plugged the foot pedal into the phones jack?

### 3. PROBLEM

- Rhythm won't start or no rhythm sound.

#### CHECK

- Is the accompaniment volume turned up high enough?
- Is the ORCHESTRATION RHYTHM button turned on?
- Are you sure you pressed the START button?
- Perhaps the PSR-84/PSR-85 is in the SYNCHRO START mode, so all you have to do is start playing.

### 4. PROBLEM

- Auto accompaniment won't function. No lower keyboard sound.

#### CHECK

- Auto accompaniment won't sound right if the FINGERED mode is selected and you're using SINGLE FINGER type fingering or improper chord fingering.
- Are you sure you're playing in the left-hand section of the keyboard when the FINGERED or SINGLE FINGER mode is selected?
- Are all ORCHESTRATION buttons on?

### 5. PROBLEM

- Auto accompaniment chords don't seem to change properly.

#### CHECK

- Are you playing chords that the PSR-84/PSR-85 can recognize (see chord types on page 20)?

### 6. PROBLEM

- Abnormal operation not listed above. Complete lack of control.

#### CHECK

- The internal microprocessor may have been "locked up" due to static electricity or other causes. Turn the instrument OFF for a moment, then turn it ON again. If the lock-up makes it impossible to turn the power off, remove the batteries or unplug the AC adaptor. If you turn the power back on within about 10 minute the previous contents of the memory will be safely retained.

### 7. PROBLEM

- Sustain pedal operation is reversed (press-OFF, release-ON).

#### CHECK

- You probably held the pedal pressed while turning the power on or inserting the pedal plug into the FOOT PEDAL jack. Turn the power off and then on again with the pedal released.

## APPENDIX D: MAINTENANCE

### • Location

Avoid exposure to direct sunlight or other sources of heat. Never leave it inside a car where it can get very hot. It may cause discoloration or deformation. Vibration, excessive dust, cold, low or high humidity can also cause malfunction.

### • Handling

Avoid rough handling. Don't drop or jolt the PSR-84/PSR-85 as this can damage the internal circuitry. Pressing too hard on keys or controls may lead to malfunctions. When cords are plugged into the rear panel jacks, pay particular attention not to apply excessive force to them since this may damage the terminals or internal circuitry.

### • Cleaning

Clean the exterior with a soft, dry cloth. Using chemical solvents may damage the finish.

### • Interference Through Electromagnetic Fields

Do not use your PSR-84/PSR-85 close to television sets or other equipment receiving electromagnetic signals as this could cause interference noise in the other appliance.

### • Service and Modifications


Your PSR-84/PSR-85 contains no user serviceable parts. Opening it or tampering with it in any way can lead to electrical shock as well as damage. Refer all servicing to qualified YAMAHA personnel.

**YAMAHA is NOT responsible for damage caused by improper use.**


## - APPENDIX E: SYSTEM RESET -

Abnormal operation procedures and other problems can cause the PSR-84/PSR-85 system to "lock up" or malfunction. Normally, simply turning the power off and then on again will solve the problem. If turning the power off and on does not restore normal operation, use the SYSTEM RESET procedure described below (all PAGE MEMORY data is initialized when a SYSTEM RESET is executed: see page 16).

1. Turn the power off.
2. Turn the power on while holding both the CUSTOM [RECORD/END] and [CLEAR] buttons.

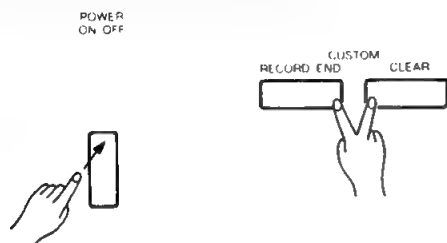

 3. The MULTI DISPLAY should appear as shown below, indicating that the SYSTEM RESET has been successful.



- If the [POWER] button is locked up and cannot be used to turn the power off, unplug and then re-insert the AC adaptor if one is being used, or remove and then replace the batteries.
- If none of the above restores operation, unplug the AC adaptor or remove the batteries for several hours, then try again.

## SPECIFICATIONS

### Keyboard:

61 keys (C1-C6) with Touch Response

### Voices:

100 voices  
Polyphony; 28

### Accompaniment Styles:

PSR-85; 103 styles  
PSR-84; 101 styles

### Demonstrations:

3 songs

### Other Controls:

**OVERALL CONTROL;** POWER (ON/OFF), MODE (NORMAL/SPLIT/SINGLE FINGER/ FINGERED), DSP (OFF/ROOM/HALL, PSR-85 only) MASTER VOLUME, ACCOMP. VOLUME (PITCH BEND RANGE, +/-), TRANSPOSE (+/-), TUNING (+/-), TEMPO (+/-), SPLIT POINT CHANGE

**PAGE MEMORY;** RECORD, PAGE (1~4 = PSR-85, 1~2 = PSR-84), MIDI BULK DUMP

### PITCH BEND

**AUTO ACCOMPANIMENT;** STYLE SELECT (0~9, +, -, quantize 1/4~1/96), ORCHESTRATION (RHYTHM, BASS, ORCHESTRA1~3), CUSTOM (RECORD/END, CLEAR)

**ACCOMPANIMENT CONTROL;** INTRO, FILL IN 1, NORMAL, FILL IN 2, BRIDGE, ENDING, SYNC-START ON/OFF (RHYTHM STOP), START/STOP

**VOICE;** VOICE SELECT (0~9, +, -), AUTO HARMONY (ON/OFF, +/-), REVERB DEPTH (+/-, PSR-85 only), VOLUME (+/-), OCTAVE (+/-), PAN (+/-), MIDI CH (+/-), DUAL VOICE (ON/OFF)

**VOICE MEMORY;** RECORD, 1~4

**SONG MEMORY;** CHORD (1~5), MELODY (1~5), CONDUCTOR, RECORD/EDIT

**SONG MEMORY;** PLAY/STOP

**MULTI PAD (PSR-85 only);** RECORD/END (TERMINATE), 1~4

**DRUM PAD (PSR-84 only);** PAD ASSIGN (ON/OFF), 1~4

**MIDI;** RECEIVE (ON/OFF), RECEIVE CH/CLOCK (+/-), MODE DEMO; 1~3

### Auxiliary Jacks:

HEADPHONES/AUX. OUT, DC IN 10-12V, FOOT PEDAL, MIDI IN/OUT

### Main Amplifiers:

8W x 2 (when using AC power adaptor)  
4W x 2 (when using batteries)

### Speakers:

12cm (4-3/4") x 2  
• The inset in the speaker grille is a design element and has no effect on the sound.

### Power Supply:

Batteries: Six SUM-1, "D" size, R-20 or equivalent batteries  
DC 10-12V: PA-5 Power Adaptor

### Dimensions (W x D x H):

968mm x 405mm x 136mm (38-1/8" x 15-15/16" x 5-3/8")

### Weight:

6.3kg (13.9lbs.)

### Supplied Accessories:

- Music Stand
- Foot Pedal
- Owner's Manual

\* Specifications subject to change without notice.

- The "Demo Tunes" and "default data of MULTI PAD (PSR-85)" of this keyboard are "Demonstration" purposes only. It may not be possible to reproduce the "Demo Tunes" and "default data of MULTI PAD (PSR-85)" 100% manually.

|                                       |        |                                      |        |
|---------------------------------------|--------|--------------------------------------|--------|
| <b>A</b>                              |        | <b>M</b>                             |        |
| AC power .....                        | 6      | Maintenance .....                    | 41     |
| Auto accompaniment .....              | 18     | Manual, how to use .....             | 3      |
| volume .....                          | 13     | Master volume control .....          | 13     |
| adding fill-ins .....                 | 19     | Melody                               |        |
| bridge variation .....                | 19     | data edit .....                      | 29     |
| normal variation .....                | 19     | playback .....                       | 31     |
| starting .....                        | 18     | recording.....                       | 28     |
| starting with an introduction .....   | 19     | MIDI                                 |        |
| stopping .....                        | 19     | bulk dump .....                      | 17, 39 |
| Auto harmony .....                    | 27     | channel .....                        | 26     |
| Auto power off .....                  | 12     | clock .....                          | 35     |
| <b>B</b>                              |        | connectors.....                      | 39     |
| Batteries .....                       | 6      | control change data.....             | 37     |
| <b>C</b>                              |        | control, description .....           | 39     |
| Chord                                 |        | multi voice mode .....               | 36     |
| data edit .....                       | 30     | receive channel .....                | 35     |
| playback .....                        | 31     | remote control mode .....            | 35     |
| sequence recording .....              | 30     | sequence recording .....             | 39     |
| Chords                                |        | system exclusive data reception .... | 36     |
| fingered mode .....                   | 20     | transmit data .....                  | 37     |
| single-finger mode .....              | 20     | Mode .....                           | 12     |
| Conductor .....                       | 32     | Multi pads .....                     | 33     |
| Custom style.....                     | 21     | Music stand .....                    | 7      |
| <b>D</b>                              |        | <b>N</b>                             |        |
| Demo .....                            | 38     | Normal mode .....                    | 12     |
| Drum/percussion key assignments ..... | 24     | <b>O</b>                             |        |
| Drum pads .....                       | 34     | Octave .....                         | 26     |
| DSP .....                             | 13     | Orchestration .....                  | 21     |
| Dual voice .....                      | 26     | <b>P</b>                             |        |
| <b>F</b>                              |        | Page memory                          |        |
| Fingered mode .....                   | 20, 13 | data .....                           | 15     |
| Foot pedal .....                      | 7      | initial settings .....               | 16     |
| <b>H</b>                              |        | recall .....                         | 16     |
| Hall effect .....                     | 13     | recording.....                       | 15     |
| Headphones .....                      | 7      | Pan.....                             | 26     |
| Headphones/Aux Out jack .....         | 7      | Pitch bend .....                     | 13     |
| <b>K</b>                              |        | range .....                          | 14     |
| Keyboard percussion .....             | 23     | Polyphony .....                      | 40     |
|                                       |        | Power button .....                   | 12     |
|                                       |        | PSR-84 nomenclature .....            | 4      |
|                                       |        | PSR-85 nomenclature .....            | 5      |

|                           |        |
|---------------------------|--------|
| <b>Q</b>                  |        |
| Quantization .....        | 22     |
| <b>R</b>                  |        |
| Reverb depth .....        | 25     |
| Room effect .....         | 13     |
| <b>S</b>                  |        |
| Single finger mode .....  | 20, 13 |
| Song memory .....         | 28     |
| Specifications .....      | 42     |
| Split mode .....          | 25, 12 |
| changing voices .....     | 25     |
| Split point change .....  | 15     |
| Style select .....        | 18     |
| System reset .....        | 42     |
| <b>T</b>                  |        |
| Tempo .....               | 14     |
| Transpose .....           | 14     |
| Troubleshooting .....     | 41     |
| Tuning .....              | 14     |
| <b>V</b>                  |        |
| Voice                     |        |
| list with polyphony ..... | 40     |
| memory .....              | 27     |
| select .....              | 23     |
| Volume                    |        |
| accompaniment .....       | 13     |
| master .....              | 13     |
| voice .....               | 25     |



# MIDI Implementation Chart

| Function         |   | Transmitted                      | Recognized   |   | Remarks  |
|------------------|---|----------------------------------|--|---|--|
|                  |   |                                  | Remote Control Mode  | Multi Voice Mode                        |  |
| Basic Channel    | Default<br>Changed  | 1-16 (*1)<br>1-16                | 1-16 (*2)<br>1-16 (*2)   | 1-16 (*2)<br>1-16 (*2)                  |  |
| Mode             | Default<br>Messages<br>Altered  | 3<br>×<br>*****                  | (*2)<br>×<br>×   | (*2) (*3)<br>×<br>×                     |  |
| Note Number      | : True voice  | 0-127<br>*****                   | 0-127<br>0-127 (*4)  | 0-127<br>0-127 (*4)                     |  |
| Velocity         | Note ON<br>Note OFF   | ○ 9nH, v = 1-127<br>× 9nH, v = 0 | ○ 9nH, v = 1-127<br>× 9nH, v = 0 or 8nH  | ○ 9nH, v = 1-127<br>× 9nH, v = 0 or 8nH |  |
| After Touch      | Key's<br>Ch's   | ×<br>×                           | ×<br>×   | ×<br>×                                  |  |
| Pitch Bender     |   | ○ (*5)                           | ○ (*6)   | ○ (*6)                                  | 7 bit resolution   |
| Control Change   | 01<br>07<br>10<br>64<br>91  | ×<br>○<br>○<br>○<br>○            | ○<br>○<br>○<br>○<br>○  | ○<br>○<br>○<br>○<br>○                   | Vibrato<br>Volume<br>Pan<br>Sustain<br>Reverb Depth<br>(PSR-85 only) |
| Program Change   | : True #  | ○ 0-99, 124-127 (*7)<br>*****    | ○ 0-99<br>0-99 (*7)  | ○ 0-99<br>0-99 (*7)                     |  |
| System Exclusive |   | ○ (*8)                           | ○ (*8)   | ×                                       |  |
| System           | : Song Pos<br>: Song Sel<br>Common : Tune                               | ×<br>×<br>×                      | ×<br>×<br>×  | ×<br>×<br>×                             |  |
| System           | : Clock<br>Real Time : Commands   | ○<br>○                           | (*9)<br>○  | ×<br>×                                  | START, STOP  |
| Aux              | : Local ON/OFF<br>: All Notes OFF<br>Messages : Active Sense<br>: Reset | ×<br>×<br>○<br>×                 | ×<br>○<br>○<br>×   | ×<br>○<br>○<br>×                        |  |
| Notes :          |   |                                  | *5: Data range is altered by the pitch bend range of panel setting.<br>i.e. Pitch bend range: 12 ..... 00H, 00H, to 7FH, 7FH<br>Pitch bend range: 1 ..... 3CH, 3AH, to 20H, 45H<br>*6: Pitch bend range of panel setting is applied.<br>*7: 0-99 = voice number<br>*8: Page memory bulk dump<br>*9: Possible to set ON/OFF manually. |   |  |

# SPECIAL MESSAGE SECTION

This product utilizes batteries or an external power supply (adapter). DO NOT connect this product to any power supply or adapter other than one described in the manual, on the name plate, or specifically recommended by Yamaha.

This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by Yamaha if a cart, etc., is accompany the accessory product.

## SPECIFICATIONS SUBJECT TO CHANGE:

The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist. **IMPORTANT:** The louder the sound, the shorter the time period before damage occurs.

## NOTICE:

Service charges incurred due to a lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

## ENVIRONMENTAL ISSUES:

Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:

**Battery Notice:** This product MAY contain a small non-rechargeable battery which (if applicable) is soldered in place. The average life span of

this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

This product may also use "household" type batteries. Some of these may be rechargeable. Make sure that the battery being charged is a rechargeable type and that the charger is intended for the battery being charged.

When installing batteries, do not mix batteries with new, or with batteries of a different type. Batteries **MUST** be installed correctly. Mismatches or incorrect installation may result in overheating and battery case rupture.

**Warning:** Do not attempt to disassemble, or incinerate any battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by the laws in your area. Note: Check with any retailer of household type batteries in your area for battery disposal information.

**Disposal Notice:** Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc. If your dealer is unable to assist you, please contact Yamaha directly.

## NAME PLATE LOCATION:

The name plate is located on the bottom of the product. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, the serial number and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

Model \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date \_\_\_\_\_

## FCC INFORMATION (U.S.A.)

### 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

### 2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

### 3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

Wichtiger Hinweis für die Benutzung in der Bundesrepublik Deutschland.

**Bescheinigung des Importeurs**

Hiermit wird bescheinigt, daß der/die/das

**Musikinstrument Typ: PSR-84/PSR-85**

(Gerät, Typ, Bezeichnung)

in Übereinstimmung mit den Bestimmungen der  
VERFÜGUNG 1046/84

(Amtsblattverfügung)

funk-entstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

**Yamaha Europa GmbH**

Name des Importeurs

- This applies only to products distributed by Yamaha Europa GmbH.
- Dies bezieht sich nur auf die von der Yamaha Europa GmbH vertriebenen Produkte.
- Ceci ne s'applique qu'aux produits distribués par Yamaha Europa GmbH.
- Esto se aplica solamente a productos distribuidos por Yamaha Europa GmbH.

**Entsorgung leerer Batterien (nur innerhalb Deutschlands)**

Leisten Sie einen Beitrag zum Umweltschutz. Verbrauchte Batterien oder Akkumulatoren dürfen nicht in den Hausmüll. Sie können bei einer Sammelstelle für Altbatterien bzw. Sondermüll abgegeben werden. Informieren Sie sich bei Ihrer Kommune.

**CANADA**

THIS DIGITAL APPARATUS DOES NOT EXCEED THE "CLASS B" LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS SET OUT IN THE RADIO INTERFERENCE REGULATION OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

LE PRESENT APPAREIL NUMERIQUE N'EMET PAS DE BRUITS RADIOELECTRIQUES DEPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMERIQUES DE LA "CLASSE B" PRESCRITES DANS LE REGLEMENT SUR LE BROUILLAGE RADIOELECTRIQUE EDICTE PAR LE MINISTERE DES COMMUNICATIONS DU CANADA.

- This applies only to products distributed by Yamaha Canada Music Ltd.
- Dies bezieht sich nur auf die von der Yamaha Canada Music Ltd. vertriebenen Produkte.
- Ceci ne s'applique qu'aux produits distribués par Yamaha Canada Music Ltd.
- Esto se aplica solamente a productos distribuidos por Yamaha Canada Music Ltd.

For details of products, please contact your nearest Yamaha or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

## NORTH AMERICA

### CANADA

**Yamaha Canada Music Ltd.**  
135 Milner Avenue, Scarborough, Ontario,  
M1S 3R1, Canada  
Tel: 416-298-1311

### U.S.A.

**Yamaha Corporation of America**  
6600 Orangethorpe Ave., Buena Park, Calif. 90620,  
U.S.A.  
Tel: 714-522-9011

## MIDDLE & SOUTH AMERICA

### MEXICO

**Yamaha De Mexico S.A. De C.V.,  
Departamento de ventas**  
Javier Rojo Gomez No.1149, Col. Gpe Del  
Moral, Deleg. Iztapalapa, 09300 Mexico, D.F.  
Tel: 686-00-33

### BRASIL

**Yamaha Musical Do Brasil LTDA.**  
Ave. Reboucas 2636, São Paulo, Brasil  
Tel: 55-11 853-1377

### PANAMA

**Yamaha De Panama S.A.**  
Edificio Interseco, Calle Elvira Mendez no.10, Piso  
3, Oficina #105, Ciudad de Panama, Panama  
Tel: 507-69-5311

### OTHER LATIN AMERICAN COUNTRIES AND CARIBBEAN COUNTRIES

**Yamaha Music Latin America Corp.**  
6101 Blue Lagoon Drive, Miami, Florida 33126,  
U.S.A.  
Tel: 305-261-4111

## EUROPE

### THE UNITED KINGDOM

**Yamaha-Kemble Music(U.K.) Ltd.**  
Sherbourne Drive, Tilbrook, Milton Keynes,  
MK7 8BL England  
Tel: 0908-366700

### IRELAND

**Danfay Ltd.**  
61D, Sallynoggin Road, Dun Laoghaire, Co. Dublin  
Tel: 01-2859177

### GERMANY/SWITZERLAND

**Yamaha Europa GmbH.**  
Siemensstraße 22-34, D-2084 Rellingen, F.R. of  
Germany  
Tel: 04101-3030

### AUSTRIA/HUNGARY/SLOVENIA/ ROMANIA/BULGARIA

**Yamaha Music Austria GesmbH.**  
Schleiergasse 20, A-1100 Wien Austria  
Tel: 0222-60203900

### THE NETHERLANDS

**Yamaha Music Benelux B.V.,  
Verkoop Administratie**  
Kanaalweg 18G, 3526 KL Utrecht, The Netherlands  
Tel: 030-828411

### BELGIUM/LUXEMBOURG

**Yamaha Music Benelux B.V.,  
Brussels-office**  
Keiberg Imperiastraat 8, 1930 Zaventem, Belgium  
Tel: 02-7258220

### FRANCE

**Yamaha Musique France, Division  
Instruments Electroniques et de Scène**  
BP 70-77312 Marne-la-Vallée Cedex 2, France  
Tel: 01-64-61-4000

### ITALY

**Yamaha Musica Italia S.P.A.,  
Home Keyboard Division**  
Viale Italia 88, 20020 Lainate(Milano), Italy  
Tel: 02-935-771

### SPAIN

**Yamaha-Hazen Electronica Musical, S.A.**  
Jorge Juan 30, 28001, Madrid, Spain  
Tel: 91-577-7270

### PORTUGAL

**Valentim de Carvalho CI SA**  
Estrada de Porto Salvo, Paço de Arcos 2780 Oeiras,  
Portugal  
Tel: 01-443-3398/4030/1823

### GREECE

**Philippe Nakas S.A.**  
Navarinou Street 13, P.Code 10680, Athens, Greece  
Tel: 01-364-7111

### SWEDEN

**Yamaha Scandinavia AB**  
J. A. Wettergrens gata 1, Box 30053, 400 43  
Göteborg, Sweden  
Tel: 031-496090

### DENMARK

**Yamaha Scandinavia Filial Denmark**  
Generatorvej 8B 2730 Herlev, Denmark  
Tel: 44 92 49 00

### FINLAND

**Fazer Music Inc.**  
Aleksanterinkatu 11, SF 00100 Helsinki, Finland  
Tel: 0435 011

### NORWAY

**Narud Yamaha AS**  
Østerdalen 29, 1345 Østerås  
Tel: 02-24 47 90

### ICELAND

**Páll H. Pálsson**  
P.O. Box 85, 121 Reykjavik, Iceland  
Tel: 01-19440

### OTHER EUROPEAN COUNTRIES

**Yamaha Europa GmbH.**  
Siemensstraße 22-34, D-2084 Rellingen, F.R. of  
Germany  
Tel: 04101-3030

## AFRICA

**Yamaha Corporation,  
International Marketing Division**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430  
Tel: 053-460-2311

## MIDDLE EAST

### TURKEY/CYPRUS

**Yamaha Musique France, Division Export**  
BP70-77312 Marne-la-Vallée Cedex 2, France  
Tel: 01-64-61-4000

### OTHER COUNTRIES

**Yamaha Corporation,  
International Marketing Division**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430  
Tel: 053-460-2311

## ASIA

### HONG KONG

**Tom Lee Music Co., Ltd.**  
11/F., Silvercord Tower 1, 30 Canton Road,  
Tsimshatsui, Kowloon, Hong Kong  
Tel: 730-1098

### INDONESIA

**PT. Yamaha Music Indonesia (Distributor)  
PT. Nusantik**  
Gedung Yamaha Music Center, Jalan Jend. Gatot  
Subroto Kav. 4, Jakarta 12930, Indonesia  
Tel: 21-520-2577

### KOREA

**Cosmos Corporation**  
#131-31, Neung-Dong, Sungdong-Ku, Seoul  
Korea  
Tel: 02-466-0021 ~ 5

### MALAYSIA

**Yamaha Music Malaysia Sdn., Bhd.**  
16-28, Jalan SS 2/72, Petaling Jaya, Selangor,  
Malaysia  
Tel: 3-717-8977

### PHILIPPINES

**Yupango Music Corporation**  
339 Gil J. Puyat Avenue, P.O. Box 885 MCPO,  
Makati, Metro Manila, Philippines  
Tel: 819-7551

### SINGAPORE

**Yamaha Music Asia Pte., Ltd.**  
Blk 17A Toa Payoh #01-190 Lorong 7  
Singapore 1231  
Tel: 354-0133

### TAIWAN

**Kung Hsue She Trading Co., Ltd.**  
No. 322, Section 1, Fu Hsing S. Road,  
Taipei 106, Taiwan. R.O.C.  
Tel: 02-709-1266

### THAILAND

**Siam Music Yamaha Co., Ltd.**  
865 Phornprapha Building, Rama I Road,  
Patumwan, Bangkok 10330, Thailand  
Tel: 2-215-3443

### THE PEOPLE'S REPUBLIC OF CHINA AND OTHER ASIAN COUNTRIES

**Yamaha Corporation,  
International Marketing Division**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430  
Tel: 053-460-2311

## OCEANIA

### AUSTRALIA

**Yamaha Music Australia Pty. Ltd.**  
17-33 Market Street, South Melbourne, Vic. 3205,  
Australia  
Tel: 3-699-2388

### NEW ZEALAND

**Music Houses of N.Z. Ltd.**  
146/148 Captain Springs Road, Te Papapa,  
Auckland, New Zealand  
Tel: 9-634-0099

### COUNTRIES AND TRUST TERRITORIES IN PACIFIC OCEAN

**Yamaha Corporation,  
International Marketing Division**  
Nakazawa-cho 10-1, Hamamatsu, Japan 430  
Tel: 053-460-2311

**HEAD OFFICE** Yamaha Corporation, Electronic Musical Instrument Division  
Nakazawa-cho 10-1, Hamamatsu, Japan 430  
Tel: 053-460-3273



### **IMPORTANT**

PLEASE RECORD THE SERIAL NUMBER OF YOUR UNIT IN THE SPACE BELOW.

**MODEL: PSR-84**

**MODEL: PSR-85**

**SERIAL NO:**

THE SERIAL NUMBER IS LOCATED ON THE BOTTOM OF THE UNIT.  
RETAIN THIS OWNER'S MANUAL IN A SAFE PLACE FOR FUTURE  
REFERENCE.